

Pioneer

FLASH MEMORY NAVIGATION AUDIO RECEIVER

AVIC-U310BT

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the operation manual.


Basic Hardware buttons



- ① **MODE button**
- ② **MULTI-CONTROL**
Rotate to adjust the audio volume. Pressing this button when the audio source is selected plays the track, file or skips chapter.
- ③ **LIST button**
The list lets you see the list of file names or folder names.
- ④ **SRC/OFF button**
Selecting the audio source.
- ⑤ **BAND/ESC button**
Changes the band for the radio.
- ⑥ **DETACH button**
Press to remove the detachable device from the head unit.


Switching the screen

Press the **MODE** button to switch between map screen and audio screen.

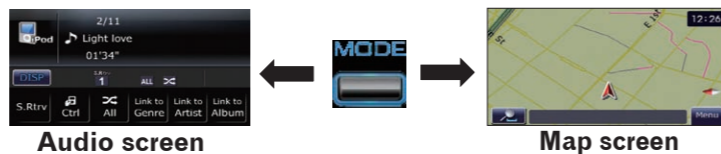

Navigation Menu

Touch **Menu** on the map screen.

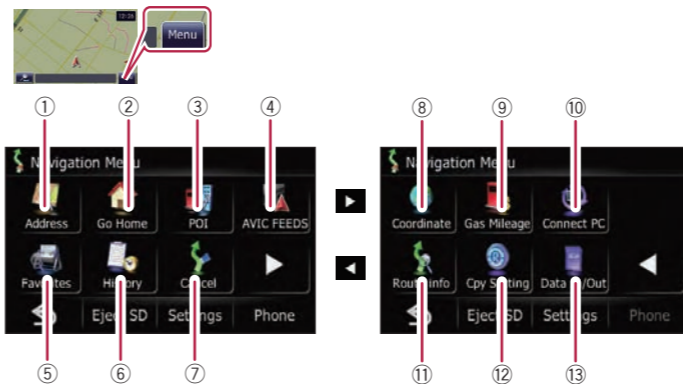


- ① Search by address
- ② Shortcut key for calculating route of going home
- ③ Search for stores, restaurants, and other businesses in the points of interest database
- ④ Searching for POIs by using the data on external storage devices (SD)
- ⑤ Select a destination from your address book
- ⑥ Select a previously routed destination
- ⑦ Canceling your current route
- ⑧ Searching for a location by coordinates
- ⑨ Gas Mileage Management
- ⑩ Switching to "PC Mode"
- ⑪ Checking the current route conditions
- ⑫ Replicating the settings
- ⑬ Exporting and importing the data

Searching for your destination by address


1 Display **Navigation Menu** and touch **Address**.



2 **Input the information that you want to set as the destination.**


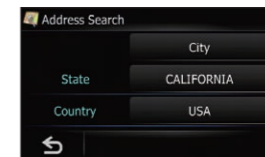


3 **Touch OK.**

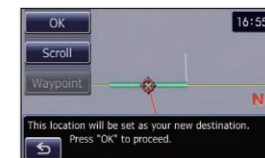


After searching for the destination, the "Route confirmation screen" appears.

4 **Touch OK.**

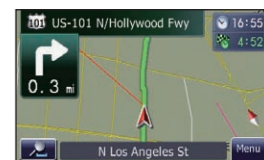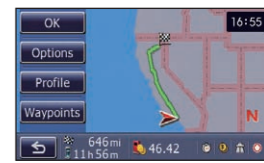

This navigation systems gives you route guidance both visually and by voice.

Basic items on the map

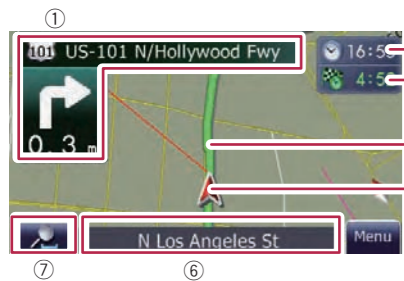

- ① Information for the next guidance point
- ② Current time
- ③ Estimated time of arrival (or distance to the destination)
- ④ Current route
- ⑤ Current position
- ⑥ Street name that your vehicle is traveling along
- ⑦ Changing the map scale and the map orientation


Scrolling the map

Dragging the map allows scrolling. The scroll speed will change depending on your drag speed.




Setting the volume for navigation system

- 1 Touch **Settings** on the "Navigation Menu" screen.
- 2 Touch **Sound**.

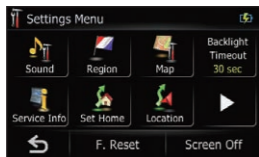


Pairing your phone

- 1 **Activate the Bluetooth function on your phone.**
- 2 **Touch the keys in the following order; Phone → Settings**
- 3 **Turn Bluetooth On/Off to On.**

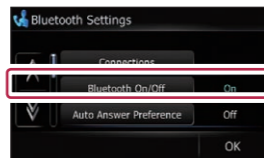


- 4 **Touch the keys in the following order; Connections → Add → Search devices**

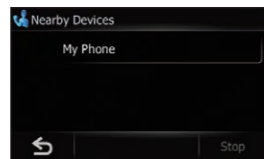

- 5 **Touch your phone on the list and then enter the PIN code from your phone. (The PIN code is "1111".)** When the pairing is successful, the message will appear.


Transferring the phone book

- 1 **Connect the cellular phone.**
- 2 **Touch Transfer on Phone Menu.**

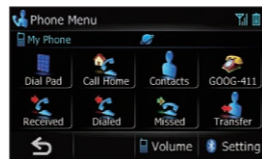

- 3 **Touch OK to enter the waiting screen.**
- 4 **Operate your phone to transfer the phone book entries during waiting screen.**
- 5 **After transferring, touch OK.**

When the transferring is successful, "Completed data loading!" will appear.

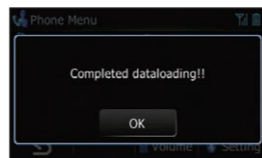

Selecting the audio source


- 1 **Press the MODE button when the map of the current location is displayed.**
- 2 **Press the SRC/OFF button repeatedly to switch between the following sources.**

XM (XM tuner) → SIRIUS (SIRIUS tuner) → HD Radio (HD Radio tuner) → TUNER (tuner) → CD (built-in CD player) → USB (USB storage device)/iPod (iPod connected using USB input) → EXT1 (external unit 1) → EXT2 (external unit 2) → AUX (auxiliary device) → XM (XM tuner)

Notes:

- The audio source is disabled if the equipment is not connected or inserted.
- When the tuner has been tuned in to an HD Radio broadcasting, "TUNER" can not be selected.

Tuner source screen

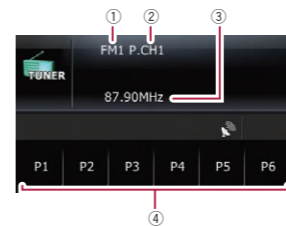


- ① **Shows which band the radio is tuned to: FM1 to FM3.**
- ② **Shows what preset item has been selected.**
- ③ **Shows the frequency.**
- ④ **Storing and recalling broadcast frequencies**

Playing your Apple iPod

You can control an iPod by connecting the USB interface cable for iPod (CD-IU50) (sold separately) to the navigation system.

- 1 **Connect your iPod.**

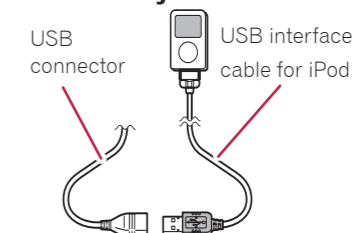

- 2 **Switch the audio source to iPod.**



- ① **Text display area**
- ② **Switches the strings in the text area**
- ③ **Sets iPod control mode.**

This navigation system's iPod function can be operated from the connected iPod.

- ④ **Playing songs in random order**
- ⑤ **Playing songs related to the currently playing song**
 - **Pressing MULTI-CONTROL right or left**
Skips the track forward or backward.
 - **Pressing and holding MULTI-CONTROL right or left**
Perform fast forward or backward.
 - **Pressing the center of MULTI-CONTROL**
The advanced function screen appears.
 - **MULTI-CONTROL Rotating**
Adjusts the audio source volume.
 - **Pressing LIST button**
Shows the list to select a song.

Note:

In this manual, iPod and iPhone will be referred to as iPod.