

# CDJ-900 Update Instructions: Ver.3.10

---

## Applicable Model: CDJ-900

---

If the version number is 3.10 or higher, it's not necessary to update the firmware.

Use the following procedure to confirm the system version.

---

### Confirm current firmware version.

---

1. Turn on the power of CDJ-900.
2. Press [MENU / UTILITY] for over 1 second. Then [UTILITY] screen is displayed.
3. Scroll the screen menu by using the rotary selector, the firmware VERSION No. will be displayed.
4. Press [MENU / UTILITY] to return to the menu screen.

---

### Firmware Update Release Note

---

- Strength connectivity with DJ software.  
Allows the following information of DJ software to be shown on the display of CDJ.
  - Browsing music file
  - Cue/Loop Point
  - WAVEFORM
- Factory default of QUANTIZE changed from OFF to ON.
- LOOP smoothing process was improved.
- Bug fix – when "SLIP" mode was cancelled, the beat mismatch occurred.
- A start time of playing back a track becomes quicker when "AUTO CUE" is enabled.
- Bug fix – not able to set a loop when the track is less than 2sec.
- The brightness of the buttons around display is adjusted to allow a darker setting.  
(BROWSE, TAGLIST, INFO, LINK, USB, DISC)

---

### Download the Firmware File

---

Click the download file "CDJ-900v310.zip" to extract the firmware files.

1. Specify the location to extract.
2. The files below are extracted.

C900DRIV.UPD	(388,690 bytes)
C900GUI.UPD	(276,862 bytes)
C900MAIN.UPD	(5,872,158 bytes)
C900PANL.UPD	(91,526 bytes)

---

## Preparations for updating firmware

---

Copy the extracted firmware files to the root directly of a USB memory device.

- \* Do not change the name of the extracted files.
- \* Use a USB device formatted in **FAT** or **FAT32** (mass storage class).

---

## Program Update Procedures

---

**\*\*\*IMPORTANT Note: Don't turn off or disconnect power, or remove a USB while update is in progress\*\*\***

1. Please set your CDJ player in status below.
  - Power off
  - No device connected (USB memory, LINK or Computer)
  - No disc loaded
2. Turn on the power of your CDJ Player while pressing both the "USB" and "RELOOP/EXIT" buttons. (Keep pressing both buttons until Pioneer logo screen disappears.)
3. A message [Connect USB storage device into top USB port] appears on the display. Then release both buttons.
4. Insert the USB memory device containing the firmware files into the USB port.
  1. Updating will start. The display shows "NOW UPDATING" message that blinks. Also "AUTO BEAT LOOP" LED blinks.
  2. Do not turn the power off during the update.
  3. The update will be completed in approx. 2 minutes.
  4. A following message appears when the update is completed.
  5. [Firmware update is completed. Turn the power off / on before using].
5. Turn the power off and remove the USB memory device after the update has been completed.

If the progress indicator does not progress during updating and update completed message does not appear after 5 minutes, or if the message [MAIN firmware update failed], [GUI firmware update failed], [PANEL firmware update failed] or [SERVO DRIVE firmware update failed] appears, contact our customer support center.

### NOTES

- Please follow the update procedure above.
- Do not turn off the power or unplug the power cable before the update completed.
- If you have any questions, contact our customer support center.