 


## CDJ-400 Software Update Ver. 1.30

### Applicable Models: CDJ-400

- System version later than Ver. 1.30 do not require this update.  
Use the following procedure to confirm the system version.

### To Confirm the CDJ-400 System Version

- 1) Turn power ON.
- 2) Press and hold the RELOOP/EXIT button for ten (10) seconds.  
*The system version appears in the display* 
- 3) Cycle the power OFF than ON to return the CDJ-400 to normal operation.

### Update Contents

- Improved detection time of the USB Memory device
- Decreased time between USB Memory device insertion and track selection
- Significantly increased reliability when using a USB hub (USB 2.0-compatible) to a computer
- Recommended update when using a PC application (Pioneer DJS, Serato Scratch LIVE, etc.)

### Program Update Procedure

- 1) Remove any discs, connected USB memory device or computer cables.
- 2) Turn the power OFF.
- 3) Press and hold the TIME MODE/AUTO CUE and RELOOP/EXIT buttons while turning the power ON.
- 4) Insert the USB memory device or disc containing the update into the CDJ-400.  
*The update takes approximately one (1) minute. The status appears on the playing-address display. Do NOT turn the power OFF while the update status is in progress.*
- 5) When the display changes to "COMPLETE", take the appropriate action for your method.  
**Disc:** Remove the disc when it is automatically ejected then turn the player OFF.  
**USB Memory:** Turn the player OFF then remove the device.

### Notes Regarding Firmware Updates

- Follow the above procedure closely to perform an update.
- Never turn OFF, disconnect the power cord, or remove the update disc during the process.
- Contact Pioneer Service if you have any questions about updating the player.
- If "ERROR" appears on the display, stop the operation and turn the power OFF. Consult with Pioneer Service at (800) 421-1404 for further instructions.