

DECADES	
4	40s
5	50s
6	60s
7	70s
8	80s
9	90s
COUNTRY	
10	CLASSIC COUNTRY
11	90s & TODAY'S COUNTRY
12	PROGRESSIVE COUNTRY
13	TRADITIONAL COUNTRY
14	BLUEGRASS
15	FOLK
16	TOP COUNTRY HITS
POP & HITS	
20	TOP 20 HITS
21	TODAY'S HITS
22	CONTEMPORARY HITS
23	LOVE SONGS
24	BEAUTIFUL MUSIC
25	SOFT ROCK/POP
27	MOVIE SOUNDTRACKS
28	SHOW TUNES
29	EURO & GLOBAL CHART HITS
CHRISTIAN	
31	CHRISTIAN ROCK
32	CHRISTIAN POP
33	GOSPEL
ROCK	
40	DEEP ALBUM ROCK
41	HARD ROCK XL
43	COLLEGE/INDIE/NEW MUSIC
44	DEEP CLASSIC ALTERNATIVE
45	SOFT ALTERNATIVE
46	CLASSIC ROCK
47	90s & TODAY'S ALTERNATIVE
48	HARD ALTERNATIVE XL
50	ACOUSTIC ROCK
51	JAMBANDS/PROG ROCK
52	UNSIGNED ARTISTS
53	PUNK/HARDCORE/SKA XL
54	ALTERNATIVE HITS
HIP-HOP & URBAN	
60	CLASSIC SOUL
61	NEO SOUL
62	TODAY'S R&B
64	OLD SCHOOL R&B
65	CLASSIC HIP-HOP/RAP XL
66	UNCUT HIP-HOP XL
67	URBAN TOP 40
JAZZ & BLUES	
70	TRADITIONAL JAZZ
71	CONTEMPORARY JAZZ
72	MODERN JAZZ
73	AMERICAN STANDARDS
74	BLUES
LIFESTYLE	
75	HEAR MUSIC™ AT STARBUCKS
76	ELECTIC
77	NEW AGE
DANCE	
80	UNDERGROUND DANCE
81	DANCE HITS
82	ELECTRONICA
83	DISCO

XM Previews on Channel 1.
 XL may include frequent explicit language.
 Please call XM Listener Care at 1-800-XM-RADIO (1-800-967-2346) for Parental Control/Blocking Option.
 * Ch.129 airs Monday-Friday, 5AM ET-6PM ET.
 * Ch.161 airs 6PM ET-SAM ET weekdays and all day Saturday & Sunday.

LATIN	
90	Latin Hits
92	Regional Mexican
94	Tropical
95	Latin Jazz
WORLD	
100	World
101	Reggae
102	African
CLASSICAL	
110	Traditional Classical
112	Opera/Classical Vocals
113	Popular Classical
KIDS	
115	Children
116	Children
NEWS	
121	FOX NEWS
122	CNN
123	CNN HEADLINE NEWS
124	ABC NEWS & TALK
125	THE WEATHER CHANNEL
127	CNBC
129	BLOOMBERG RADIO
130	MSNBC
131	BBC WORLD SERVICE
132	C-SPAN RADIO
133	XM PUBLIC RADIO
134	CNN EN ESPAÑOL
SPORTS	
140	SPORTS TALK/PLAY-BY-PLAY
141	SPORTS NEWS
142	SPORTS TALK
143	SPORTS TALK
144	NASCAR RADIO
145	IN-RACE DRIVER AUDIO
175	MLB HOME PLATE™ 24/7 NEWS & TALK
176-189	14 MLB™ PLAY-BY-PLAY CHANNELS
190	PLAY-BY-PLAY EN ESPAÑOL
191-193	ACC FOOTBALL/BASKETBALL
194-196	PAC-10 FOOTBALL/BASKETBALL
197-199	Big Ten Football/Basketball
TALK	
150	COMEDY XL
151	FAMILY COMEDY
152	EXTREME TALK XL
155	MTV RADIO
156	VH1 RADIO
161	DISCOVERY RADIO
162	E! ENTERTAINMENT
163	BOOKS & DRAMA
164	OLD TIME RADIO
165	EXPERTS & ADVICE
166	CONSERVATIVE TALK
167	PROGRESSIVE TALK
169	AFRICAN-AMERICAN TALK
170	CHRISTIAN TALK
171	TRUCKERS CHANNEL
200	CONCERTS/SPECIAL FEATURES
202	OPEI & ANTHONY SHOW XL
XM INSTANT TRAFFIC & WEATHER	
210-230	21 MAJOR MARKETS
247	XM EMERGENCY ALERT
PREMIUM	
205	ADULT XL Additional \$2.99/month

 
▲ Visit nasca2.xmradio.com for NASCAR 2 Ch. 14 broadcast schedules. Visit college.sports.xmradio.com for college game schedules. Games subject to availability.
 * All schedules subject to change.
 * Visit xmradio.com for Ch.200 special event dates and times.

stuff...

What's in the box?



AirWare® receiver

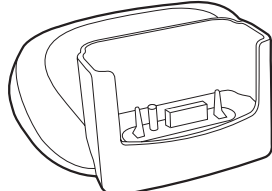

home docking station



 
home power adaptor



audio cable



remote control

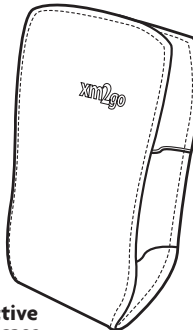


protective case




home antenna



belt clip/stand

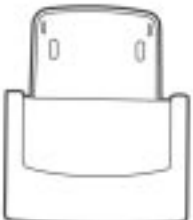

vehicle docking station

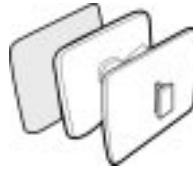

swivel mount (with extra adhesive pad)



vent mount



headphones




vehicle antenna



rechargeable lithium ion battery



vehicle power adaptor

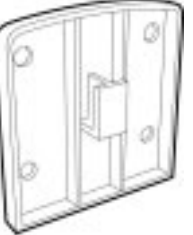

flush mount



cleaning kit

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

The Pioneer XM AirWare Satellite Radio Receiver incorporates an FM transmitter and is therefore classified as an intentional transmitter. Changes or modifications to the unit not expressly approved by Pioneer can void your authority to operate this equipment.

Important: The FCC and FAA have not certified the Pioneer XM AirWare Satellite Radio Receiver for use in any aircraft (neither portable nor permanent installation). Therefore, Pioneer cannot support this type of application or installation.



PIONEER ELECTRONICS (USA) INC.
 CUSTOMER SUPPORT DIVISION
 P.O. Box 1760
 Long Beach, CA 90801
 800-421-1404

♻️ Printed on Recycled Paper
 2005 ©Pioneer Corporation. All rights reserved.

AirWare is a registered trademark of Pioneer Corporation.
 The XM name, XM2Go, TuneSelect, and related logos are trademarks of XM Satellite Radio Inc.



Satellite Radio Receiver – Quick Guide

GEX-AIRWARE!



Warning: This manual contains important safety and operating information. Please read and follow the instructions in this manual. Failure to do so could result in personal injury, death, and/or damage to your AirWare receiver, accessories, and/or to your vehicle or other property.

ready...

Getting set up


1 Install the battery

Be sure to charge your battery for at least 3 hours on the home stand before use.




2 Set up

Assemble your AirWare® and its home docking station as shown.

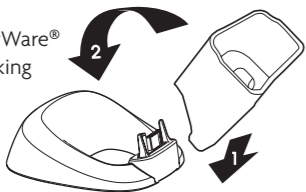

3 Connect to stereo


Plug the AC adaptor into an outlet. Connect the home antenna and connect the line out to either your home stereo or powered (PC type) speakers.

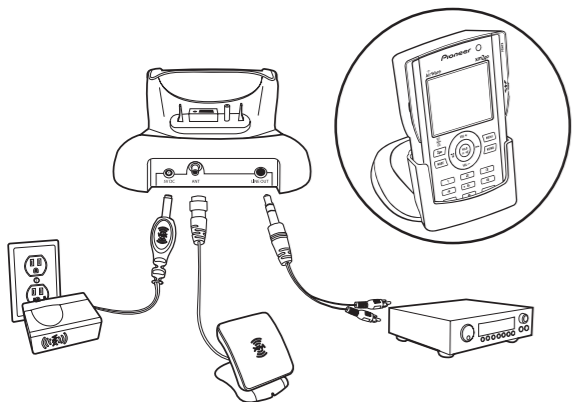

4 Controls

Turn on your AirWare by pressing the power button. You should be able to hear channel 1, the XM Preview Channel, through your headphones or attached stereo/speakers.

Before you begin, take a moment to familiarize yourself with your AirWare's controls. Most basic functions can be accessed using the front panel buttons and the dial. More advanced features are accessed using the "menu" button and the dial.

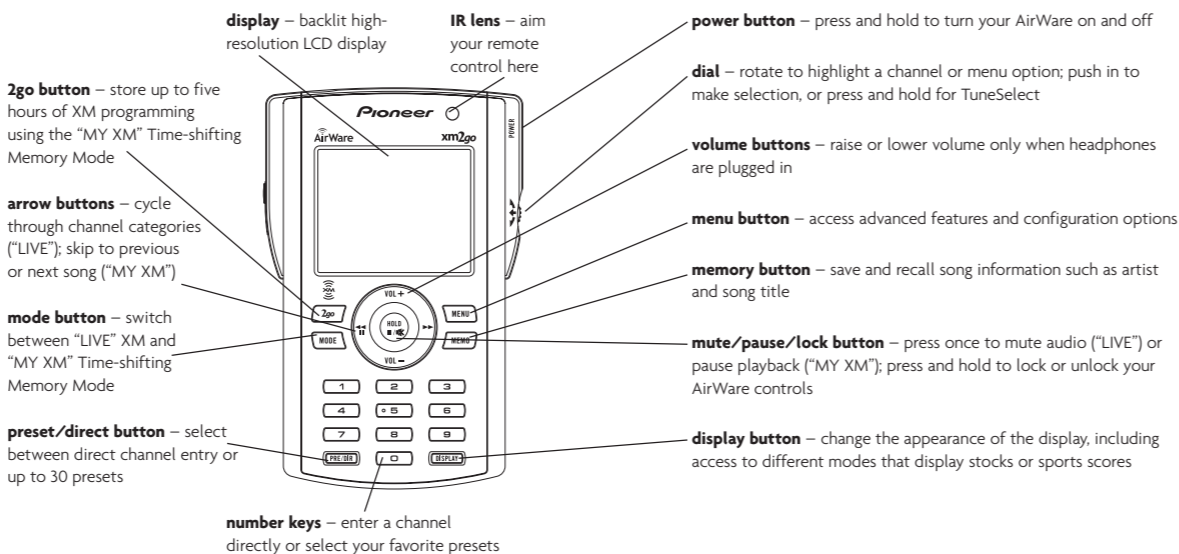

2go button – store up to five hours of XM programming using the "MY XM" Time-shifting Memory Mode

arrow buttons – cycle through channel categories ("LIVE"); skip to previous or next song ("MY XM")

mode button – switch between "LIVE" XM and "MY XM" Time-shifting Memory Mode

preset/direct button – select between direct channel entry or up to 30 presets

number keys – enter a channel directly or select your favorite presets

5 Aiming the home antenna


If you do not hear channel 1, the XM Preview Channel, and the screen displays "NO SIGNAL," try moving your AirWare's antenna to another location. Make sure the antenna points south outdoors or through a window.



Complete instructions, including an optional activation setup in a vehicle, the availability of accessories designed to improve your signal reception, and more useful information and tips about your AirWare can be found in your AirWare User Guide.

Your AirWare can help you aim the home antenna to pull in the strongest signal.

- Using the "menu" button and dial, choose "Antenna Aiming."
- Slowly turn and tilt the antenna. The signal bars on the display will change. Find the position that gives at least two bars on either "satellite" or "terrestrial."

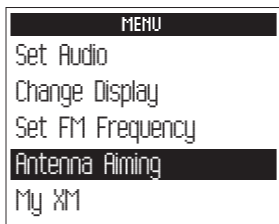

- When you've found the best position, press the "menu" button to return to normal operation.

Note: Satellite radio reception depends on the ability of the antenna to receive/record a signal. The signal may not be available in buildings or if obstructed (e.g. by mountains, trees, bridges, etc.).

set... Activate and explore

 
Turn the dial to highlight channel 0, and press the dial in to select it. You should see an 8-character XM Radio ID in the display. (The XM Radio ID should also be on your AirWare's package and under the battery.) Write the ID here:



The XM Radio ID does not use the letters I, O, S, and F.

XM subscription required for reception of XM service. Not available in Alaska or Hawaii. Activate your XM Satellite Radioservice by contacting XM at <http://activate.xmradio.com> or by calling 1.800.XM.RADIO (1.800.967.2346). You will need the XM Radio ID and a major credit card.

XM will send a signal from the satellites to activate the full channel lineup. Activation normally takes 10 to 15 minutes, but during peak busy periods, you may need to keep your AirWare on longer to complete the activation process.

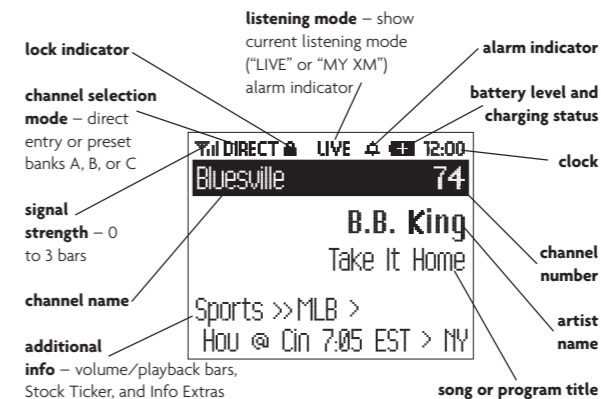

lock indicator

channel selection mode – direct entry or preset banks A, B, or C

signal strength – 0 to 3 bars

channel name

additional info – volume/playback bars, Stock Ticker, and Info Extras

listening mode – show current listening mode ("LIVE" or "MY XM")

alarm indicator

clock

channel number

artist name

song or program title

alarm indicator

battery level and charging status

clock

channel number

artist name

song or program title

Rotate the dial to preview a list of channels. When you find one you're interested in, press the dial in to tune to that channel!

If you want to tune to a channel and know its channel number, you can use the number keys. Press the "pre/dir" button until "DIRECT" flashes in the display. Press the number keys corresponding to the channel number, e.g., "4" followed by "5" for channel 45.

XM's channels are organized into categories such as "Rock," "Country," "News," and "Sports." Press the "◀" and "▶" buttons to explore these categories; rotate the dial to view the channels within each category.

ROCK	
Deep Tracks	40
Bone Yard xL	41
XMUM xL	42
XMU	43
Fred	44

go!


Charge the battery and store some music

2go: Store and play back with a single button

Your AirWare lets you store up to five hours of programming and play it back at a later time. Listen to XM wherever you are, including in a tunnel, subway, or anywhere satellite coverage may be limited. While the battery is charging in the home docking station, try storing some XM programming from XM's lineup of over 130 channels!

TO STORE:

- Turn on your AirWare and select a channel.
- Press the "2go" button. To prevent you from accidentally storing over a previously stored program, your AirWare will ask you to confirm. Press the "2go" button again. The center of the top line of your AirWare's screen switches from "LIVE" to "REC."
- To stop storing and continue with live programming, press the "2go" button again. The display reverts to "LIVE."

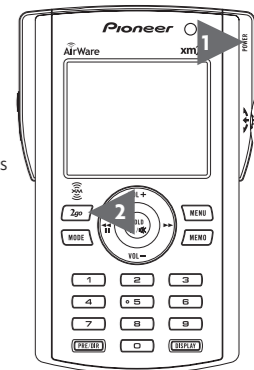

TO PLAY BACK:

- Press the mode button. Your AirWare switches from "LIVE" to "MY XM," and will begin to play back from the beginning or where you last stopped or paused.
- "MY XM" holds up to five hours of programming. Press either the "◀" or "▶" button to skip to the previous or to the next song.
- You can also rotate the dial to view a list of the stored artists and songs. Simply highlight an artist using the dial; the artist, song title, and other useful information will scroll by. Then press the dial in to listen to it.

go further...

Advanced features & additional info

Check out the User Guide for advanced features, troubleshooting guidelines, and additional information.