

## **DVR-633H-S IR CODES**

<b>FUNCTION</b>	<b>COMMAND 1</b>	<b>COMMAND 2</b>
POWER	AB 2C	AF BC
ON	AB 2C	AF BA
OFF	AB 2C	AF BB
ONE TOUCH COPY	AB 2A	AF 36
OPEN/CLOSE	AB 2C	AF B6
HDD	AB 2A	AF 64
DVD	AB 2A	AF 65
AUDIO	AB 2C	AF BE
SUBTITLE	AB 2C	AF 36
ANGLE	AB 2C	AF B5
PLAY MODE	AB 2C	AF 7F
INPUT SELECT	AB 2A	AF AE
CHANNEL-	AB 2A	AF 6F
CHANNEL+	AB 2A	AF 6E
VCR+	AB 2A	AF 66
TV GUIDE	AB 2A	AF 3C
INFO	AB 2A	AF 3D
CLEAR	AB 2C	AF E5
DISC NAVIGATOR	AB 2C	AF B4
PLAY LIST	AB 2C	AF B9
HOME MENU	AB 2C	AF B0
RETURN	AB 2C	AF F4
ENTER	AB 2C	AF EF
UP ARROW	AB 2C	AF F2
LEFT ARROW	AB 2C	AF 63
RIGHT ARROW	AB 2C	AF 64
DOWN ARROW	AB 2C	AF F3
SCAN BACK	AB 25	
SCAN FORWARD	AB 24	
PLAY	AB 22	
PAUSE	AB 23	
STOP	AB 20	
CM Back	AB 2A	AF AC
CM Skip	AB 2A	AF AD
CHAPTER BACK	AB 27	
CHAPTER FORWARD	AB 26	
STEP BACK	AB 2C	AF B8
STEP FORWARD	AB 2C	AF B7
FWD SCAN/STEP/SLOW	AB 2C	AF E9
REV SCAN/STEP/SLOW	AB 2C	AF EA
RECORD START	AB 28	
RECORD STOP	AB 21	
RECORD MODE	AB 2A	AF 6B
TIMER RECORD	AB 2A	AF 69
NAVI MARK	AB 2A	AF A6
HELP	AB 2A	AF 79
EASY TIMER	AB 2A	AF 3A
DISPLAY	AB 2C	AF E3
1	AB 2C	AF A1
2	AB 2C	AF A2
3	AB 2C	AF A3
4	AB 2C	AF A4
5	AB 2C	AF A5
6	AB 2C	AF A6
7	AB 2C	AF A7

**DVR-633H-S IR CODES**

8	AB 2C	AF A8
9	AB 2C	AF A9
0	AB 2C	AF A0