

VSX-84TXSi IR Codes

CATEGORY	FUNCTION	COMMAND
Inputs	Function DVD/LD	A585
	TV	A50C
	SAT	A510
	DVR/VCR 1	A589
	DVR/VCR 2	A59E+A5CA
	VIDEO/GAME 1	A516
	VIDEO/GAME 2	A517
	HDMI 1	A55E+A5CA
	HDMI 2	A55E+A5CB
	HDMI 3	A55E+A5CC
	HDMI 4	A55E+A5CD
	USB	A59E+A5C9
	XM	A59E+A5CC
	CD	A54C
	CD-R/TAPE	A588
	TUNER	A547
	PHONO	A54D
	MULTI-CH IN	A55E+A506
	iPod	A59E+A5CB
	i.LINK	A59E+A5C8
	INPUT SEL	A555
INPUT SEL REVERSE	A556+A5C1	
VIDEO SELECT	A554	
HDMI SELECT	A556+A5C2	
Power, Volume, Other	POWER ON/OFF	A51C
	ON	A51A
	OFF	A51B
	MUTE ON/OFF	A512
	ON	A551
	OFF	A552
	VOLUME UP (remote)	A50A
	VOLUME DOWN (remote)	A50B
	SPEAKERS	A556+A500
	FL DIMMER	A556+A506
	SLEEP	A548
	SR+ ON/OFF	A59E+A5C7
	SR+ ON	A59D+A5C6
	SR+ OFF	A59D+A5C7
STATUS	A59B+A5DD	
Stereo Toggle	STEREO	A59 F +A5C0
Standard Group Toggle	STANDARD	A55E+A508
Standard for 2-Channel Includes Left & Right	PROLOGIC	A59F+A5C2
	PROLOGIC2 MOVIE	A59A+A500
	PROLOGIC2 MUSIC	A59A+A501
	PROLOGIC2 GAME	A59A+A502
	Neo:6 CINEMA	A59A+A503
	Neo:6 MUSIC	A59A+A504
	PL2x MOVIE	A59A+A5C6
	PL2x MUSIC	A59A+A5C7
Standard for Multi-Channel	Depending on Source	A59A+A5C9
	+ EX	A59A+A5CA
	+PL2x MOVIE	A59A+A5CB
	+PL2x MUSIC	A59A+A5CC
	DTS ES Neo:6	A59A+A5CD
	DTS ES matrix	A59A+A5CE
DTS ES discrete	A59A+A5CF	
Advanced Group Toggle	ADVANCED SURROUND	A59F+A5D3
Advanced	ACTION	A59F+A5DA
	SCI-FI	A59A+A505
	DRAMA	A59F+A5D9
	MUSICAL	A59F+A5D8
	MONO FILM	A59A+A506
	7-D THEATER	A59F+A5D0
	CLASSICAL	A59A+A507
	CHAMBER	A59A+A508
	JAZZ	A59F+A5C4
	ROCK	A59A+A509
	DANCE	A59A+A5C0
	7CH STEREO	A59A+A5C1
	PHONES SURROUND	A59F+A5DB
	VIRTUAL SURROUND	A59F+A5DF

VSX-84TXSi IR Codes

THX Group Toggle	THX	A59F+A5D1	
THX for 2-Channel	THX PROLOGIC	A59A+A5D0	
	THX PL2 MOVIE	A59A+A5D1	
	THX Neo:6 cinema	A59A+A5D2	
	THX PL2x MOVIE	A59A+A5D3	
	THX GAMES MODE	A59A+A5D4	
THX for Multi-Channel	THX Depending on Source	A59A+A5D6	
	THX + EX	A59A+A5D7	
	THX +PL2x MOVIE	A59A+A5D8	
	THX +DTS ES Neo:6	A59A+A5D9	
	THX +DTS ES matrix	A59A+A5DA	
	THX +DTS ES discrete	A59A+A5DB	
	THX + SELECT2	A59A+A5DC	
	THX + MUSICMODE SELECT	A59A+A5DD	
	THX + GAMES MODE	A59A+A5DE	
Auto Group Toggle	AUTO SURR./STREAM DIRECT	A59A+A5C3	
Auto/Stream Direct	AUTO SURROUND	A59F+A5D5	
	NORMAL DIRECT	A59A+A5C4	
	PURE DIRECT	A59A+A5C5	
Adjust	CH SELECT/EFFECT	A556+A504	
	CH SELECT REVERSE	A580	
	CH LEVEL UP	A542+A507	
	CH LEVEL DOWN	A541+A507	
	CH SELECT RETURN	A55D+A509	
	MIDNIGHT/LOUDNESS	A59F+A5CB	
	LOUDNESS	A544	
	SIGNAL SELECT	A556+A503	
	ANALOG INPUT ATT	A55E+A507	
	SBch PROCESSING	A59F+A5D4	
	MCACC POSITION	A55A+A5CC	
	PHASE CONTROL ON/OFF	A55A+A5CB	
	SOUND RETRIEVER	A55A+A5CD	
	AV PARAMETER	AV PARAMETER	A55A+A5CA
Cursor UP		A580	
DOWN		A581	
RIGHT		A582	
LEFT		A583	
ENTER (remote)		A584	
RETURN		A55D+A509	
TONE ON/OFF		A557+A5C0	
BASS UP		A557+A500	
BASS DOWN		A557+A501	
TREBLE UP		A557+A502	
TREBLE DOWN		A557+A503	
Hi-BIT/Hi-SAMPLING		A559+A506	
DIGITAL NOISE REDUCTION		A559+A507	
DIALOG ENHACEMENT		A59F+A5DE	
System Setup		SYSTEM SETUP	A59B+A5D6
		Cursor UP	A580
	DOWN	A581	
	RIGHT	A582	
	LEFT	A583	
	ENTER (remote)	A584	
	RETURN	A55D+A509	

VSX-84TXSi IR Codes

Tuner	STATION 10	A400
	1	A401
	2	A402
	3	A403
	4	A404
	5	A405
	6	A406
	7	A407
	8	A408
	9	A409
	STATION UP	A410
	DOWN	A411
	FREQUENCY UP	A456
	DOWN	A457
	BAND	A413
	FM	A40D
	AM	A40E
	TUNER EDIT	A458
	TUNER ENTER	A459
	TUNER RETURN	A55D+A509
	MPX	A41E
	CLASS	A440
	DIRECT ACCESS	A443
	DISPLAY	A44A

iPod	PLAY	A598+A5C0
	PAUSE	A598+A5C1
	STOP	A598+A5CA
	PREVIOUS (< <)	A598+A5C2
	NEXT (> >)	A598+A5C3
	REV (> >)	A598+A5C4
	FWD (< <)	A598+A5C5
	REPEAT	A598+A5C6
	SHUFFLE	A598+A5C7
	DISPLAY	A598+A5C8
	OSD ON/OFF	A598+A5C9
	VOL UP	A598+A5CB
	VOL DOWN	A598+A5CC
	Cursor UP	A598+A5D0
	Cursor DOWN	A598+A5D1
	Cursor RIGHT	A598+A5D2
	Cursor LEFT	A598+A5D3
	ENTER	A598+A5D4
	RETURN	A598+A5D5
	TOP MENU	A598+A5D6

XM Radio	STATION 10	A49F+A4C0
	1	A49F+A4C1
	2	A49F+A4C2
	3	A49F+A4C3
	4	A49F+A4C4
	5	A49F+A4C5
	6	A49F+A4C6
	7	A49F+A4C7
	8	A49F+A4C8
	9	A49F+A4C9
	CH + / Cursol DOWN ↓	A49F+A4CA
	CH - / Cursol UP ↑	A49F+A4CB
	PRESET ST + (→)	A49F+A4CE
	PRESET ST - (←)	A49F+A4CF
	DISPLAY	A49F+A4CC
	PRESET	A49F+A4CD
	CLASS	A49F+A4D2
	DIRECT ACCESS(CH)	A49F+A4D0
	MEMORY (EDIT)	A49F+A4D1
	XM MENU	A49F+A4D3
	ENTER	A49F+A4D5
	RETURN	A49F+A4D6
	CATEGORY	A49F+A4D7

VSX-84TXSi IR Codes

Sub Room	MULTI-ROOM ON/OFF	A59C+A5D0
	ROOM 2 ON	A599+A505
	ROOM 2 OFF	A599+A506
	ROOM 2 ON/OFF	A599+A5D5
	ROOM 3 ON	A599+A507
	ROOM 3 OFF	A599+A508
	ROOM 3 ON/OFF	A599+A5D6
	ROOM 2 INPUT SELECT	A59E+A5D0
	ROOM 2 INPUT REVERSE	A599+A502
	ROOM 2 SOURCE	A599+A5D3
	ROOM 2 DVD	A59E+A5D1
	ROOM 2 TV	A59E+A5D2
	ROOM 2 SAT	A59E+A5D3
	ROOM 2 DVR/VCR 1	A59E+A5CE
	ROOM 2 DVR/VCR 2	A599+A503
	ROOM 2 VIDEO/GAME 1	A59E+A5D4
	ROOM 2 VIDEO/GAME 2	A599+A504
	ROOM 2 XM	A599+A501
	ROOM 2 CD	A59E+A5D8
	ROOM 2 CDR/TAPE	A59E+A5D9
	ROOM 2 TUNER	A59E+A5DB
	ROOM 2 PHONO	A59E+A5DD
	ROOM 2 MULTI-CH-IN	A59E+A5DF
	ROOM 2 iPod	A599+A500
	ROOM 2 VOLUME UP	A557+A5C3
	ROOM 2 VOLUME DOWN	A557+A5C4
	ROOM 3 INPUT SELECT	A599+A5C0
	ROOM 3 INPUT REVERSE	A599+A5C1
	ROOM 3 SOURCE	A599+A5D4
	ROOM 3 DVD	A599+A5C2
	ROOM 3 TV	A599+A5C3
	ROOM 3 SAT	A599+A5C4
	ROOM 3 DVR/VCR 1	A599+A5C5
	ROOM 3 DVR/VCR 2	A599+A5C6
	ROOM 3 VIDEO/GAME 1	A599+A5D1
	ROOM 3 VIDEO/GAME 2	A599+A5D2
	ROOM 3 CD	A599+A5C7
	ROOM 3 CDR	A599+A5C8