 





PDP-5070HD IR CODES

CATEGORY	FUNCTION	COMMAND
POWER	POWER ON/OFF	AA1C
	POWER ON	AA1A
	POWER OFF	AA1B
	SLEEP	AA5E+AF70
VOLUME	VOLUME +	AA0A
	VOLUME -	AA0B
	MUTING	AA49
INPUT	INPUT TOGGLE (?)	AA13
	INPUT 1	AA5A+AF7A
	INPUT 2	AA5A+AF7B
	INPUT 3	AA5A+AF7C
	INPUT 4	AA5A+AF7D
	INPUT 5	AA5A+AF7E
	INPUT 6	AA5A+AF7F
	INPUT PC	AA5A+AF74
	ANT	AA45
	ANTENNA A/B CYCLE	AA0C
	TUNER	1
2		AA02
3		AA03
4		AA04
5		AA05
6		AA06
7		AA07
8		AA08
9		AA09
0		AA00
.(DOT)		AA5A+AF64
CH+		AA10
CH-		AA11
CH ENTER		AA5A+AF61
CH RETURN		AA5A+AF62
 BLUE/FAVORITE A		AA5B+AF2F
 RED/FAVORITE B		AA5B+AF2C
 GREEN/FAVORITE C		AA5B+AF2D
 YELLOW/FAVORITE D		AA5B+AF2E
TV GUIDE		AA5B+AF24
Day +		AA5B+AF2A
Day -		AA5B+AF2B
PAGE +		AA5B+AF33
PAGE -		AA5B+AF34
TV GUIDE INFO		AA5B+AF25
TV GUIDE MENU		AA5B+AF27
MTS		AA1E
SETUP	DISPLAY	AA4A
	SCREEN SIZE	AA5E+AF3A
	AV SELECTION	AA5E+AF61
	HOME MENU	AA5B+AF20
	RETURN	AA5B+AF22
	CURSOR RIGHT	AA24
	CURSOR LEFT	AA25
	CURSOR UP	AA26
	CURSOR DOWN	AA27
	ENTER	AA28
	PIP	FREEZE
SPLIT		AA5E+AF20
SWAP		AA5E+AF25
SHIFT		AA5E+AF27