

VSX-90TXV IR Code List

	KEY NAME or FUNCTION NAME	Remote control code	
Input System	function DVD/LD	A585	
	TV/SAT	A50C	
	DVR/VCR 1	A589	
	DVR/VCR 2	A59E+A5CA	
	VIDEO/GAME	A516	
	XM	A59E+A5CC	
	SIRIUS	A55C + A5C2	
	CD	A54C	
	CD-R/TAPE	A588	
	TUNER	A547	
	iPod	A59E+A5CB	
	INPUT SEL	A555	
	INPUT SEL REVERSE	A556+A5C1	
	MULTI-CH IN	A55E+A506	
Auto Function	Auto Function DVD	A59B+A5CB	
	TV/SAT	A59B+A5CD	
	DVR1/VCR 1	A59B+A5DE	
	DVR2/VCR 2	A55E+A5D4	
	VIDEO/GAME	A59B+A5C9	
	XM	A55E+A5D6	
	SIRIUS	A59B+A502	
	CD	A59B+A5C0	
	CD-R/TAPE	A59B+A5CF	
	TUNER	A59B+A5C4	
	iPod	A55E+A5D5	
Amp System	POWER ON/OFF	A51C	
	ON	A51A	
	OFF	A51B	
	MUTE ON/OFF	A512	
	ON	A551	
	OFF	A552	
	VOLUME UP (remote)	A50A	
	VOLUME DOWN (remote)	A50B	
	BASS UP	A557+A500	
	BASS DOWN	A557+A501	
	TREBLE UP	A557+A502	
	TREBLE DOWN	A557+A503	
	SPEAKERS	A556+A500	
	FL DIMMER	A556+A506	
	SLEEP	A548	
	PDP LINKAGE(SR+) ON/OFF	A59E+A5C7	
PDP LINKAGE(SR+) ON	A59D+A5C6		
PDP LINKAGE(SR+) OFF	A59D+A5C7		
Surround			
	Stereo Group	STEREO	A59F+A5C0
	Standard Group	STANDARD	A55E+A508
	Advanced	ADVANCED SURROUND	A59F+A5D3
	THX Group	THX	A59F+A5D1
	Auto/Stream	AUTO SURROUND	A59F+A5D5
		CH SELECT/EFFECT	A556+A504
		CH LEVEL UP	A542+A507
		CH LEVEL DOWN	A541+A507
		MIDNIGHT/LOUDNESS	A59F+A5CB
		SIGNAL SELECT	A556+A503
		ANALOG INPUT ATT	A55E+A507
		SBch PROCESSING	A59F+A5D4
		DIALOG ENHACEMENT	A59F+A5DE
	ACOUSTIC EQ	A59F+A5DC	
	PHASE CONTROL ON/OFF	A55A+A5CB	
	SOUND RETRIEVER	A55A+A5CD	
Setup System	SYSTEM SETUP	A59B+A5D6	
	Cursor UP	A580	
	DOWN	A581	
	RIGHT	A582	
	LEFT	A583	
	ENTER (remote)	A584	
	RETURN	A55D+A509	
	Tuner System	STATION 10	A400
1		A401	
2		A402	
3		A403	
4		A404	
5		A405	
6		A406	
7		A407	
8		A408	
9		A409	
STATION UP		A410	
DOWN		A411	
FREQUENCY UP		A456	
DOWN		A457	
BAND		A413	
FM		A40D	
AM		A40E	
TUNER EDIT		A458	
TUNER ENTER		A459	
TUNER RETURN		A55D+A509	
MPX		A41E	
CLASS		A440	
DIRECT ACCESS		A443	
DISPLAY	A44A		

iPod System	PLAY	A598+A5C0
	PAUSE	A598+A5C1
	STOP	A598+A5CA
	PREVIOUS (< <)	A598+A5C2
	NEXT (> >)	A598+A5C3
	REV (> >)	A598+A5C4
	FWD (< <)	A598+A5C5
	REPEAT	A598+A5C6
	SHUFFLE	A598+A5C7
	DISPLAY	A598+A5C8
	OSD ON/OFF(PHOTO)	A598+A5C9
	Cursor UP	A598+A5D0
	Cursor DOWN	A598+A5D1
	Cursor RIGHT	A598+A5D2
	Cursor LEFT	A598+A5D3
	ENTER	A598+A5D4
	RETURN	A598+A5D5
TOP MENU	A598+A5D6	

XM Radio System	STATION 10	A49F+A4C0
	1	A49F+A4C1
	2	A49F+A4C2
	3	A49F+A4C3
	4	A49F+A4C4
	5	A49F+A4C5
	6	A49F+A4C6
	7	A49F+A4C7
	8	A49F+A4C8
	9	A49F+A4C9
	CH + / Cursol DOWN↓	A49F+A4CA
	CH - / Cursol UP↑	A49F+A4CB
	PRESET ST + (→)	A49F+A4CE
	PRESET ST - (←)	A49F+A4CF
	DISPLAY	A49F+A4CC
	PRESET	A49F+A4CD
	CLASS	A49F+A4D2
	DIRECT ACCESS(CH)	A49F+A4D0
	MEMORY (EDIT)	A49F+A4D1
	XM MENU	A49F+A4D3
	ENTER	A49F+A4D5
	RETURN	A49F+A4D6
	CATEGORY	A49F+A4D7

SIRIUS System	STATION 10	A49E+A4C0
	1	A49E+A4C1
	2	A49E+A4C2
	3	A49E+A4C3
	4	A49E+A4C4
	5	A49E+A4C5
	6	A49E+A4C6
	7	A49E+A4C7
	8	A49E+A4C8
	9	A49E+A4C9
	CH + / Cursol DOWN↓	A49E+A4CA
	CH - / Cursol UP↑	A49E+A4CB
	PRESET ST + (→)	A49E+A4CE
	PRESET ST - (←)	A49E+A4CF
	DISPLAY	A49E+A4CC
	PRESET	A49E+A4CD
	CLASS	A49E+A4D2
	DIRECT ACCESS(CH)	A49E+A4D0
	MEMORY (EDIT)	A49E+A4D1
	TOP MENU	A49E+A4D3
	ENTER	A49E+A4D5
	RETURN	A49E+A4D6
	CATEGORY	A49E+A4D7

Sub Room System	MULTI-ROOM ON/OFF	A59C+A5D0
	ROOM 2 ON	A599+A505
	ROOM 2 OFF	A599+A506
	ROOM 2 ON/OFF	A599+A5D5
	ROOM 2 INPUT SELECT	A59E+A5D0
	ROOM 2 INPUT REVERSE	A599+A502
	ROOM 2 DVD	A59E+A5D1
	ROOM 2 TV	A59E+A5D2
	ROOM 2 DVR/VCR 1	A59E+A5CE
	ROOM 2 DVR/VCR 2	A599+A503
	ROOM 2 VIDEO/GAME	A59E+A5D4
	ROOM 2 CD	A59E+A5D8
	ROOM 2 CDR/TAPE	A59E+A5D9
	ROOM 2 TUNER	A59E+A5DB
	ROOM 2 iPod	A599+A500
	ROOM 2 VOLUME UP	A557+A5C3
	ROOM 2 VOLUME DOWN	A557+A5C4