

VSX-91TXH IR Code List

	KEY NAME or FUNCTION NAME	Remote control code	
Input System	function DVD/LD	A585	
	TV/SAT	A50C	
	DVR/VCR 1	A589	
	DVR/VCR 2	A59E+A5CA	
	VIDEO/GAME	A516	
	HDMI 1	A55E+A5CA	
	HDMI 2	A55E+A5CB	
	XM	A59E+A5CC	
	SIRIUS	A55C + A5C2	
	CD	A54C	
	CD-R/TAPE	A588	
	TUNER	A547	
	DVR1/DVR2	nothing	
	iPod	A59E+A5CB	
	INPUT SEL	A555	
	INPUT SEL REVERSE	A556+A5C1	
	MULTI-CH IN	A55E+A506	
Auto Function	Auto Function DVD	A59B+A5CB	
	TV/SAT	A59B+A5CD	
	DVR1/VCR 1	A59B+A5DE	
	DVR2/VCR 2	A55E+A5D4	
	VIDEO/GAME	A59B+A5C9	
	HDMI 1	A55E+A5D7	
	HDMI 2	A55E+A5D8	
	XM	A55E+A5D6	
	SIRIUS	A59B+A502	
	CD	A59B+A5C0	
	CD-R/TAPE	A59B+A5CF	
	TUNER	A59B+A5C4	
	iPod	A55E+A5D5	
Amp System	POWER ON/OFF	A51C	
	ON	A51A	
	OFF	A51B	
	MUTE ON/OFF	A512	
	ON	A551	
	OFF	A552	
	VOLUME UP (remote)	A50A	
	VOLUME DOWN (remote)	A50B	
	SPEAKERS	A556+A500	
	FL DIMMER	A556+A506	
	SLEEP	A548	
	PDP LINKAGE(SR+) ON/OFF	A59E+A5C7	
	PDP LINKAGE(SR+) ON	A59D+A5C6	
	PDP LINKAGE(SR+) OFF	A59D+A5C7	
	STATUS	A59B+A5DD	
	Surround		
	Stereo Group	STEREO	A59F+A5C0
Front Stage Surround Advance Focus		A557+A5C5	
Front Stage Surround Advance Wide		A557+A5C6	
Standard Group	STANDARD	A55E+A508	
Standard for 2ch include LtRt	PROLOGIC	A59F+A5C2	
	PROLOGIC2 MOVIE	A59A+A500	
	PROLOGIC2 MUSIC	A59A+A501	
	PROLOGIC2 GAME	A59A+A502	
	Neo:6 CINEMA	A59A+A503	
	Neo:6 MUSIC	A59A+A504	
	PL2x MOVIE	A59A+A5C6	
	PL2x MUSIC	A59A+A5C7	
	PL2x GAME	A59A+A5C8	
Standard for Multi-ch	Depending on Source (Multi-ch)	A59A+A5C9	
	+ EX	A59A+A5CA	
	+PL2x MOVIE	A59A+A5CB	
	+PL2x MUSIC	A59A+A5CC	
	DTS ES Neo:6	A59A+A5CD	
	DTS ES matrix	A59A+A5CE	
DTS ES discrete	A59A+A5CF		

Advanced	ADVANCED SURROUND	A59F+A5D3
Advanced	ACTION	A59F+A5DA
	DRAMA	A59F+A5D9
	SCI-FI	A59A+A505
	MONO FILM	A59A+A506
	ENTERTAINMENT SHOW	A59F+A5D8
	EXPANDED THEATER	A59F+A5D0
	TV SURROUND	A59F+A5D7
	ADV.GAME	A59F+A5D6
	SPORTS	A59A+A5C2
	CLASSICAL	A59A+A507
	ROCK/POP	A59A+A509
	UNPLUGGED	A59F+A5C4
	EXTENDED STEREO	A59A+A5C1
PHONES SURROUND	A59F+A5DB	

THX Group	THX	A59F+A5D1
-----------	-----	-----------

THX for 2ch	THX PROLOGIC	A59A+A5D0
	THX PL2 MOVIE	A59A+A5D1
	THX Neo:6 cinema	A59A+A5D2
	THX PL2x MOVIE	A59A+A5D3
	THX GAMES MODE	A59A+A5D4

THX for Multi-ch	THX Depending on Source (Multi-ch)	A59A+A5D6
	THX + EX	A59A+A5D7
	THX +PL2x MOVIE	A59A+A5D8
	THX +DTS ES Neo:6	A59A+A5D9
	THX +DTS ES matrix	A59A+A5DA
	THX +DTS ES discrete	A59A+A5DB
	THX + SELECT2	A59A+A5DC
	THX + MUSICMODE SELECT	A59A+A5DD
	THX + GAMES MODE	A59A+A5DE

Auto Group	AUTO SURR./STREAM DIRECT	A59A+A5C3
------------	--------------------------	-----------

Direct	AUTO SURROUND	A59F+A5D5
	NORMAL DIRECT	A59A+A5C4
	PURE DIRECT	A59A+A5C5

CH SELECT/EFFECT	A556+A504
CH SELECT REVERSE	A580
CH LEVEL UP	A542+A507
CH LEVEL DOWN	A541+A507
CH SELECT RETURN	A55D+A509
MIDNIGHT/LOUDNESS	A59F+A5CB
SIGNAL SELECT	A556+A503
ANALOG INPUT ATT	A55E+A507
SBch PROCESSING	A59F+A5D4
MCACC POSITION	A55A+A5CC
PHASE CONTROL ON/OFF	A55A+A5CB
SOUND RETRIEVER	A55A+A5CD

AV	AV PARAMETER	A55A+A5CA
	Cursor UP	A580
	DOWN	A581
	RIGHT	A582
	LEFT	A583
	ENTER (remote)	A584
	RETURN	A55D+A509

BASS UP	A557+A500
BASS DOWN	A557+A501
TREBLE UP	A557+A502
TREBLE DOWN	A557+A503
HI-BIT/Hi-SAMPLING	A559+A506
DIGITAL NOISE REDUCTION	A559+A507
DIALOG ENHACEMENT	A59F+A5DE

Setup System	SYSTEM SETUP	A59B+A5D6
	Cursor UP	A580
	DOWN	A581
	RIGHT	A582
	LEFT	A583
	ENTER (remote)	A584
	RETURN	A55D+A509

Tuner System	STATION 10	A400
	1	A401
	2	A402
	3	A403
	4	A404
	5	A405
	6	A406
	7	A407
	8	A408
	9	A409
	STATION UP	A410
	DOWN	A411
	FREQUENCY UP	A456
	DOWN	A457
	BAND	A413
	FM	A40D
	AM	A40E
	TUNER EDIT	A458
	TUNER ENTER	A459
	TUNER RETURN	A55D+A509
MPX	A41E	
CLASS	A440	
DIRECT ACCESS	A443	
DISPLAY	A44A	

iPod System	PLAY	A598+A5C0
	PAUSE	A598+A5C1
	STOP	A598+A5CA
	PREVIOUS (< <)	A598+A5C2
	NEXT (> >)	A598+A5C3
	REV (< <)	A598+A5C4
	FWD (> >)	A598+A5C5
	REPEAT	A598+A5C6
	SHUFFLE	A598+A5C7
	DISPLAY	A598+A5C8
	OSD ON/OFF	A598+A5C9
	VOL UP	A598+A5CB
	VOL DOWN	A598+A5CC
	Cursor UP	A598+A5D0
	Cursor DOWN	A598+A5D1
	Cursor RIGHT	A598+A5D2
	Cursor LEFT	A598+A5D3
	ENTER	A598+A5D4
	RETURN	A598+A5D5
	TOP MENU	A598+A5D6

XM Radio System	STATION 10	A49F+A4C0
	1	A49F+A4C1
	2	A49F+A4C2
	3	A49F+A4C3
	4	A49F+A4C4
	5	A49F+A4C5
	6	A49F+A4C6
	7	A49F+A4C7
	8	A49F+A4C8
	9	A49F+A4C9
	CH + / Cursol DOWN ↓	A49F+A4CA
	CH - / Cursol UP ↑	A49F+A4CB
	PRESET ST + (→)	A49F+A4CE
	PRESET ST - (←)	A49F+A4CF
	DISPLAY	A49F+A4CC
	PRESET	A49F+A4CD
	CLASS	A49F+A4D2
	DIRECT ACCESS(CH)	A49F+A4D0
	MEMORY (EDIT)	A49F+A4D1
	XM MENU	A49F+A4D3
	ENTER	A49F+A4D5
	RETURN	A49F+A4D6
	CATEGORY	A49F+A4D7

SIRIUS System	STATION 10	A49E+A4C0
	1	A49E+A4C1
	2	A49E+A4C2
	3	A49E+A4C3
	4	A49E+A4C4
	5	A49E+A4C5
	6	A49E+A4C6
	7	A49E+A4C7
	8	A49E+A4C8
	9	A49E+A4C9
	CH + / Cursor DOWN↓	A49E+A4CA
	CH - / Cursor UP↑	A49E+A4CB
	PRESET ST + (→)	A49E+A4CE
	PRESET ST - (←)	A49E+A4CF
	DISPLAY	A49E+A4CC
	PRESET	A49E+A4CD
	CLASS	A49E+A4D2
	DIRECT ACCESS(CH)	A49E+A4D0
	MEMORY (EDIT)	A49E+A4D1
	TOP MENU	A49E+A4D3
	CLEAR	A49E+A4D4
	ENTER	A49E+A4D5
	RETURN	A49E+A4D6
	CATEGORY	A49E+A4D7

Sub Room System	MULTI-ROOM ON/OFF	A59C+A5D0
	ROOM 2 ON	A599+A505
	ROOM 2 OFF	A599+A506
	ROOM 2 ON/OFF	A599+A5D5
	ROOM 2 INPUT SELECT	A59E+A5D0
	ROOM 2 INPUT REVERSE	A599+A502
	ROOM 2 DVD	A59E+A5D1
	ROOM 2 TV	A59E+A5D2
	ROOM 2 DVR/VCR 1	A59E+A5CE
	ROOM 2 DVR/VCR 2	A599+A503
	ROOM 2 VIDEO/GAME	A59E+A5D4
	ROOM 2 CD	A59E+A5D8
	ROOM 2 CDR/TAPE	A59E+A5D9
	ROOM 2 TUNER	A59E+A5DB
	ROOM 2 iPod	A599+A500
	ROOM 2 VOLUME UP	A557+A5C3
	ROOM 2 VOLUME DOWN	A557+A5C4