

VSX-94TXH IR Code List

	KEY OR FUNCTION NAME	Remote control code
Input	function DVD	A585
	BD	A55C+A5C0
	TV	A50C
	DVR/VCR 1	A589
	DVR/VCR 2	A59E+A5CA
	VIDEO/GAME 1	A516
	VIDEO/GAME 2	A517
	HDMI 1	A55E+A5CA
	HDMI 2	A55E+A5CB
	HDMI 3	A55E+A5CC
	HDMI 4	A55E+A5CD
	HOME MEDIA GALLERY	A55C+A5C1
	XM RADIO	A59E+A5CC
	SIRIUS	A55C+A5C2
	CD	A54C
	CD-R/TAPE	A588
	TUNER	A547
	PHONO	A54D
	MULTI-CH IN	A55E+A506
	iPod	A59E+A5CB
	HDMI	A556+A5C2
	INPUT SEL	A555
	INPUT SEL REVERSE	A556+A5C1

Auto Function	Auto Function DVD	A59B+A5CB
	BD	A59B+A500
	TV	A59B+A5CD
	DVR1/VCR 1	A59B+A5DE
	DVR2/VCR 2	A55E+A5D4
	VIDEO/GAME 1	A59B+A5C9
	VIDEO/GAME 2	A55E+A5D3
	HDMI 1	A55E+A5D7
	HDMI 2	A55E+A5D8
	HDMI 3	A55E+A5D9
	HDMI 4	A55E+A5DD
	HOME MEDIA GALLERY	A59B+A501
	XM	A55E+A5D6
	SIRIUS	A59B+A502
	CD	A59B+A5C0
	CD-R/TAPE	A59B+A5CF
	TUNER	A59B+A5C4
	PHONO	A59B+A5C1
	MULTI-CH IN	A55E+A5D2
	iPod	A55E+A5D5

Sub Zone System	MULTI-ZONE ON/OFF	A59C+A5D0
	ZONE 2 ON	A599+A505
	ZONE 2 OFF	A599+A506
	ZONE 2 ON/OFF	A599+A5D5
	ZONE 3 ON	A599+A507
	ZONE 3 OFF	A599+A508
	ZONE 3 ON/OFF	A599+A5D6
	ZONE 2 INPUT SELECT	A59E+A5D0
	ZONE 2 INPUT REVERSE	A599+A502
	ZONE 2 SOURCE	A599+A5D3
	ZONE 2 DVD	A59E+A5D1
	ZONE 2 BD	A59C+A5D1
	ZONE 2 TV	A59E+A5D2
	ZONE 2 DVR/VCR 1	A59E+A5CE
	ZONE 2 DVR/VCR 2	A599+A503
	ZONE 2 VIDEO/GAME 1	A59E+A5D4
	ZONE 2 VIDEO/GAME 2	A599+A504
	ZONE 2 XM	A599+A501
	ZONE 2 SIRIUS	A59C+A5D5
	ZONE 2 CD	A59E+A5D8
	ZONE 2 CDR	A59E+A5D9
	ZONE 2 TUNER	A59E+A5DB
	ZONE 2 MULTI-CH-IN	A59E+A5DF
	ZONE 2 iPod	A599+A500
	ZONE 2 VOLUME UP	A557+A5C3
	ZONE 2 VOLUME DOWN	A557+A5C4
	ZONE 2 VOLUME DIRECT SET	nothing
	ZONE 3 INPUT SELECT	A599+A5C0
	ZONE 3 INPUT REVERSE	A599+A5C1
	ZONE 3 SOURCE	A599+A5D4
	ZONE 3 DVD	A599+A5C2
	ZONE 3 BD	A59C+A5D2
	ZONE 3 TV	A599+A5C3
	ZONE 3 DVR/VCR 1	A599+A5C5
	ZONE 3 DVR/VCR 2	A599+A5C6
	ZONE 3 VIDEO/GAME 1	A599+A5D1
	ZONE 3 VIDEO/GAME 2	A599+A5D2

ZONE 3 CD	A599+A5C7
ZONE 3 CDR	A599+A5C8

Amp system	POWER ON/OFF	A51C
	ON	A51A
	OFF	A51B
	MUTE ON/OFF	A512
	ON	A551
	OFF	A552
	VOLUME UP (remote)	A50A
	VOLUME DOWN (remote)	A50B
	VOLUME DIRECT SET (for 232c)	nothing
	SPEAKERS	A556+A500
	DIMMER	A556+A506
	SLEEP	A548
	PDP LINKAGE(SR+) ON/OFF	A59E+A5C7
	PDP LINKAGE(SR+) ON	A59D+A5C6
	PDP LINKAGE(SR+) OFF	A59D+A5C7
	STATUS	A59B+A5DD

CEC	GENRE	A559+A5D6
-----	-------	-----------

Surround

Stereo Group	STEREO (Toggle)	A59 F +A5C0	
	Stereo	STEREO	A557+A5CA
		Front Stage Surround Advance Focus	A557+A5C5
		Front Stage Surround Advance Wide	A557+A5C6
Standard Group Standard for 2ch include LtRt	STANDARD	A55E+A508	
	PRO LOGIC	A59F+A5C2	
	PRO LOGIC2 MOVIE	A59A+A500	
	PRO LOGIC2 MUSIC	A59A+A501	
	PRO LOGIC2 GAME	A59A+A502	
	Neo:6 CINEMA	A59A+A503	
	Neo:6 MUSIC	A59A+A504	
	PRO LOGIC2x MOVIE	A59A+A5C6	
	PRO LOGIC2x MUSIC	A59A+A5C7	
	PRO LOGIC2x GAME	A59A+A5C8	
	XM HD SURROUND	A557+A5C7	
	NEURAL THX	A557+A5C8	
	Standard for Multi-ch	Depending on Source	A59A+A5C9
		+ DOLBY EX	A59A+A5CA
		+PRO LOGIC2x MOVIE	A59A+A5CB
		+PRO LOGIC2x MUSIC	A59A+A5CC
		DTS-ES Neo:6	A59A+A5CD
DTS-ES matrix		A59A+A5CE	
DTS-ES discrete		A59A+A5CF	
DTS-ES 8ch discrete	A557+A5C9		
Advanced Advanced	ADVANCED SURROUND	A59F+A5D3	
	ACTION	A59F+A5DA	
	DRAMA	A59F+A5D9	
	SCI-FI	A59A+A505	
	MONO FILM	A59A+A506	
	ENTERTAINMENT SHOW	A59F+A5D8	
	EXPANDED THEATER	A59F+A5D0	
	TV SURROUND	A59F+A5D7	
	ADV. GAME	A59F+A5D6	
	SPORTS	A59A+A5C2	
	CLASSICAL	A59A+A507	
	ROCK/POP	A59A+A509	
	UNPLUGGED	A59F+A5C4	
	EXTENDED STEREO	A59A+A5C1	
	PHONES SURROUND	A59F+A5DB	
THX Group	THX	A59F+A5D1	
	THX for 2ch	THX PROLOGIC	A59A+A5D0
THX PL2 MOVIE		A59A+A5D1	
THX Neo:6 cinema		A59A+A5D2	
THX PL2x MOVIE		A59A+A5D3	
THX GAMES MODE		A59A+A5D4	
THX for Multi-ch		THX Depending on Source (Multi-ch素)	A59A+A5D6
	THX + EX	A59A+A5D7	
	THX +PRO LOGIC2x MOVIE	A59A+A5D8	
	THX +DTS-ES Neo:6	A59A+A5D9	
	THX +DTS-ES matrix	A59A+A5DA	
	THX +DTS-ES discrete	A59A+A5DB	
	THX +DTS-ES 8ch discrete	A557+A5CB	
	THX + SELECT2	A59A+A5DC	
	THX + MUSICMODE SELECT	A59A+A5DD	
	THX + GAMES MODE	A59A+A5DE	
Auto Group	AUTO SURR./STREAM DIRECT	A59A+A5C3	
	Direct	AUTO SURROUND	A59F+A5D5
NORMAL DIRECT		A59A+A5C4	
PURE DIRECT		A59A+A5C5	
MIDNIGHT/LOUDNESS		A59F+A5CB	
SIGNAL SELECT		A556+A503	
ANALOG INPUT ATT		A55E+A507	
SBch PROCESSING		A59F+A5D4	

MCACC POSITION	A55A+A5CC
PHASE CONTROL ON/OFF	A55A+A5CB

CHANNEL SELECT	CH SELECT/EFFECT	A556+A504
	Cursor UP	A580
	DOWN	A581
	RIGHT	A582
	LEFT	A583
	ENTER (remote)	A584
	RETURN	A55D+A509
	CH LEVEL (+)	A542+A507
	CH LEVEL (-)	A541+A507

AUDIO PARAMETER	AUDIO PARAMETER	A55A+A5CA
	Cursor UP	A580
	DOWN	A581
	RIGHT	A582
	LEFT	A583
	ENTER (remote)	A584
	RETURN	A55D+A509
	TONE ON/OFF	A557+A5C0
	BASS UP	A557+A500
	BASS DOWN	A557+A501
	TREBLE UP	A557+A502
	TREBLE DOWN	A557+A503
	HI-BIT/HI-SAMPLING	A559+A506
	SOUND RETRIEVER	A55A+A5CD
	DIGITAL NOISE REDUCTION	A559+A507
	DIALOG ENHACEMENT	A59F+A5DE

VIDEO PARAMETER	VIDEO PARAMETER	A55B+A5C0
	Cursor UP	A580
	DOWN	A581
	RIGHT	A582
	LEFT	A583
	ENTER (remote)	A584
	RETURN	A55D+A509

Setup System	SYSTEM SETUP	A59B+A5D6
	Cursor UP	A580
	DOWN	A581
	RIGHT	A582
	LEFT	A583
	ENTER (remote)	A584
	RETURN	A55D+A509

Tuner System	STATION 10	A400
	1	A401
	2	A402
	3	A403
	4	A404
	5	A405
	6	A406
	7	A407
	8	A408
	9	A409
	STATION UP	A410
	DOWN	A411
	FREQUENCY UP	A456
	DOWN	A457
	BAND	A413
	FM	A40D
	AM	A40E
	TUNER EDIT	A458
	TUNER ENTER	A459
	TUNER RETURN	A55D+A509
	MPX/NOISE CUT	A41E
	CLASS	A440
	DIRECT ACCESS	A443
	DISPLAY	A44A

iPod System	PLAY	A598+A5C0
	PAUSE	A598+A5C1
	STOP	A598+A5CA
	PREVIOUS (<)	A598+A5C2
	NEXT (>)	A598+A5C3
	REV (>)	A598+A5C4
	FWD (< <)	A598+A5C5
	REPEAT	A598+A5C6
	SHUFFLE	A598+A5C7
	DISPLAY	A598+A5C8
	OSD ON/OFF	A598+A5C9
	Cursor UP	A598+A5D0
	Cursor DOWN	A598+A5D1
	Cursor RIGHT	A598+A5D2

Cursor LEFT	A598+A5D3
ENTER	A598+A5D4
RETURN	A598+A5D5
TOP MENU	A598+A5D6

XM Radio System	STATION 10	A49F+A4C0
	1	A49F+A4C1
	2	A49F+A4C2
	3	A49F+A4C3
	4	A49F+A4C4
	5	A49F+A4C5
	6	A49F+A4C6
	7	A49F+A4C7
	8	A49F+A4C8
	9	A49F+A4C9
	Cursor DOWN	A49F+A4CA
	Cursor UP	A49F+A4CB
	Cursor RIGHT	A49F+A4CE
	Cursor LEFT	A49F+A4CF
	DISPLAY	A49F+A4CC
	PRESET	A49F+A4CD
	CLASS	A49F+A4D2
	DIRECT ACCESS(CH)	A49F+A4D0
	MEMORY (EDIT)	A49F+A4D1
	XM MENU	A49F+A4D3
	ENTER	A49F+A4D5
	RETURN	A49F+A4D6
	CATEGORY	A49F+A4D7

SIRIUS Radio System	STATION 10	A49E+A4C0
	1	A49E+A4C1
	2	A49E+A4C2
	3	A49E+A4C3
	4	A49E+A4C4
	5	A49E+A4C5
	6	A49E+A4C6
	7	A49E+A4C7
	8	A49E+A4C8
	9	A49E+A4C9
	Cursor DOWN	A49E+A4CA
	Cursor UP	A49E+A4CB
	Cursor RIGHT	A49E+A4CE
	Cursor LEFT	A49E+A4CF
	DISPLAY	A49E+A4CC
	PRESET	A49E+A4CD
	CLASS	A49E+A4D2
	DIRECT ACCESS	A49E+A4D0
	MEMORY	A49E+A4D1
	TOP MENU	A49E+A4D3
	ENTER	A49E+A4D5
	RETURN	A49E+A4D6
	CATEGORY	A49E+A4D7

Home Media Gallery Audio	0	A597+A500
	1	A597+A501
	2	A597+A502
	3	A597+A503
	4	A597+A504
	5	A597+A505
	6	A597+A506
	7	A597+A507
	8	A597+A508
	9	A597+A509
	PLAY	A597+A5C0
	PAUSE	A597+A5C1
	PREVIOUS (<)	A597+A5C2
	NEXT (>)	A597+A5C3
	DISPLAY	A597+A5C8
	STOP	A597+A5CA
	UP	A597+A5D0
	DOWN	A597+A5D1
	RIGHT	A597+A5D2
	LEFT	A597+A5D3
	ENTER	A597+A5D4
	RETURN	A597+A5D5
	PROGRAM	A597+A5D6
	CLEAR	A597+A5D7
	REPEAT	A597+A5D8
	RANDOM	A597+A5D9
	MENU	A597+A5DA
	EDIT	A597+A5DB
	CLASS	A597+A5DC