

**Multi-CD control high power CD player  
with XM/FM/AM tuner**

ENGLISH

**SUPER  TUNER III**

---

**Operation Manual**

**DEH-P3370XM**

***Pioneer***

<b>Dear Customer</b> .....	<b>3</b>
<b>Key Finder</b> .....	<b>4</b>
● Head Unit	
● Remote Controller (CD-R600)	
<b>Before Using This Product</b> .....	<b>5</b>
About This Product .....	5
About This Manual .....	5
Important .....	5
Resetting the Unit .....	5
Precaution .....	6
After-sales Service for Pioneer Products .....	6
When using the 50-Disc Type	
Multi-CD Player .....	6
Introducing XM Satellite Radio .....	7
How to Subscribe .....	7
About the XM Mark .....	7
<b>Basic Operation</b> .....	<b>8</b>
To Listen to Music .....	8
Basic Operation of Tuner .....	9
● Manual and Seek Tuning	
● Preset Tuning	
● Band	
Basic Operation of XM Tuner .....	10
● Selecting the Channel by Channel Number	
● Preset Tuning	
● Band	
Basic Operation of Built-in CD Player .....	11
● Switching the Display	
● Open	
● Track Search and Fast Forward/Reverse	
● CD Loading Slot	
● Eject	
Basic Operation of Multi-CD Player .....	13
● Track Search and Fast Forward/Reverse	
● Disc Search	
● Disc Number Search	
(for 6-Disc, 12-Disc types)	
Corresponding Display Indications and	
Buttons .....	14
Entering the Function Menu .....	15
Function Menu Functions .....	16
Entering the Detailed Setting Menu .....	18
Detailed Setting Menu Functions .....	19
PGM Button Functions .....	20
<b>Tuner Operation</b> .....	<b>21</b>
● Local Seek Tuning (LOCAL)	
● Best Stations Memory (BSM)	
<b>XM Tuner Operation</b> .....	<b>22</b>
● Switching the Display	
● Switching the Channel Select Mode	
● Selecting the Channel in the Channel	
Category	
Display the ID Code (RADIO ID) .....	24
Messages .....	24
<b>Using the Built-in CD Player</b> .....	<b>25</b>
● Repeat Play (REPEAT)	
● Random Play (RANDOM)	
● Scan Play (T-SCAN)	
● Pause (PAUSE)	
● Disc Title Input (TITLE IN)	
<b>Using Multi-CD Players</b> .....	<b>27</b>
● Repeat Play (REPEAT)	
● Random Play (RANDOM)	
● Scan Play (SCAN)	
● Pause (PAUSE)	
ITS (Instant Track Selection) .....	29
● ITS Programming (ITS)	
● ITS Play (ITS-P)	
● Erase a Track Program	
● Erase a Disc Program	
Disc Title .....	31
● Disc Title Input (TITLE IN)	
● Selecting Discs by Disc Title List	
(TITLE LIST)	
● Displaying Disc Title	
Compression and DBE (COMP) .....	33
● COMP/DBE ON/OFF Switching	
CD TEXT Function (for CD TEXT	
compatible type) .....	34
● Title Display Switching	
● Title Scroll	

<b>Audio Adjustment .....</b>	<b>35</b>	<b>Other Functions .....</b>	<b>47</b>
Setting the Sound Focus Equalizer (SFEQ) ....	35	Displaying the Time .....	47
● About the Sound Focus Equalizer (SFEQ)		Using the AUX Source .....	47
Selecting the Equalizer Curve .....	36	● Selecting the AUX Source	
● About the Custom Curves		● AUX Title Input (TITLE IN)	
Entering the Audio Menu .....	37	<b>CD Player and Care .....</b>	<b>48</b>
Audio Menu Functions .....	37	Precaution .....	48
● Balance Adjustment (FADER)		Built-in CD Player's Error Message .....	49
● Equalizer Curve Adjustment (EQ-LOW/EQ-MID/EQ-HIGH)		<b>Specifications .....</b>	<b>50</b>
● Equalizer Curve Fine Adjustment			
● Bass Adjustment (BASS)			
● Treble Adjustment (TRE)			
● Loudness Adjustment (LOUD)			
● Subwoofer Output (SUB.W)			
● Subwoofer Setting Adjustment (80HZ 0)			
● Source Level Adjustment (SLA)			
<b>Detaching and Replacing the</b>			
<b>Front Panel .....</b>	<b>43</b>		
Theft Protection .....	43		
● Detaching the Front Panel			
● Replacing the Front Panel			
● Warning Tone			
<b>Initial Setting .....</b>	<b>44</b>		
Entering the Initial Setting Menu .....	44		
Initial Setting Menu Functions .....	45		
● Setting the Time			
● Setting the Warning Tone (WARN)			
● Switching the AUX Mode (AUX)			
● Setting the Dimmer (DIMMER)			
● Setting the Rear Output (FRT+REAR)			



## Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion—and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

## We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

### Decibel

Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.


### THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.



## Head Unit

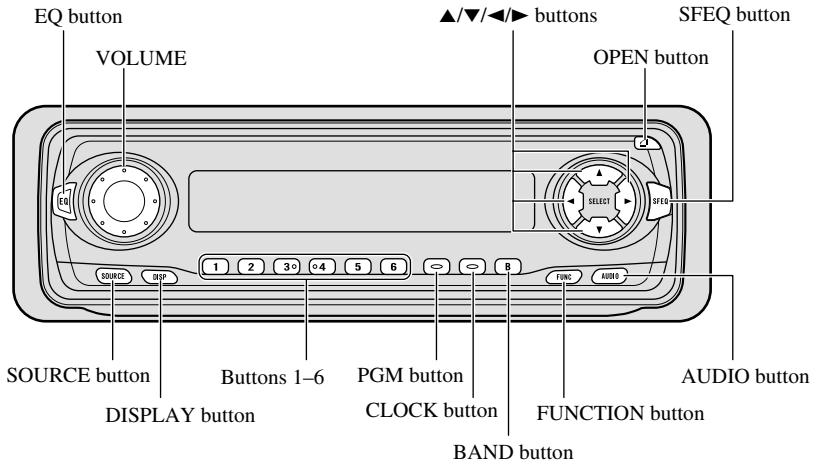


## Remote Controller (CD-R600)

The remote controller (CD-R600) enabling remote control of the head unit is sold separately. Operation is the same as when using buttons on the head unit.

### ATT button

This lets you quickly lower volume level (by about 90%).  
Press once more to return to the original volume level.

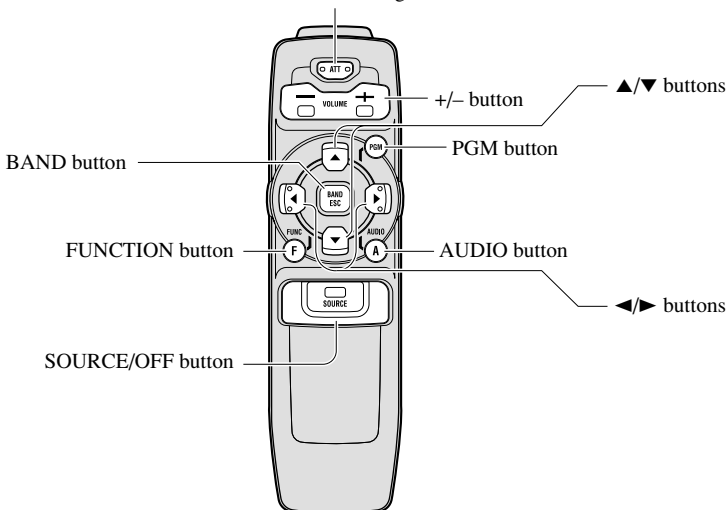

# Before Using This Product

## About This Product

The tuner frequencies on this product are allocated for use in North America. Use in other areas may result in improper reception.

## About This Manual

This product features a number of sophisticated functions ensuring superior reception and operation. All are designed for the easiest possible use, but many are not self-explanatory. This operation manual is intended to help you benefit fully from their potential and to maximize your listening enjoyment.

We recommend that you familiarize yourself with the functions and their operation by reading through the manual before you use this product. It is especially important that you read and observe the "Precaution" on page 6 and in other sections.

This manual explains head unit operation. You can perform the same operations with the remote controller.

## Important

The serial number of this device is located on the bottom of this product. For your own security and convenience, be sure to record this number on the enclosed warranty card.

## Resetting the Unit


The unit must be reset under the following conditions:

When using this product for the first time after installation.

When this product fails to operate properly.

When strange (incorrect) messages appear on the display.

- **To reset the microprocessor, press the RESET button on the unit with a pen tip or other pointed instrument.**

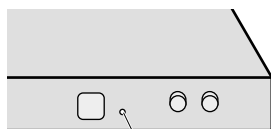

RESET button

## Precaution

**CAUTION: USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

**CAUTION: THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.**

- Keep this manual handy as a reference for operating procedures and precautions.
- Always keep the volume low enough for outside sounds to be audible.
- Protect the product from moisture.
- If the battery is disconnected, the preset memory will be erased and must be reprogrammed.

## After-sales Service for Pioneer Products

Please contact the dealer or distributor from where you purchased the product for its after-sales service (including warranty conditions) or any other information. In case the necessary information is not available, please contact the company listed below:

Please do not ship your product to the company at the address listed below for repair without advance contact.

### ■ U.S.A.

Pioneer Electronics Service, Inc.  
CUSTOMER SERVICE  
DEPARTMENT  
P.O. Box 1760  
Long Beach, CA 90801  
800-421-1404

For warranty information please see the Limited Warranty sheet included with your product.

## When using the 50-Disc Type Multi-CD Player

The available functions of the 50-Disc Type Multi-CD Player are described in this Operation Manual. Note that other 50-Disc Type Multi-CD Player functions cannot be used with this product.

## *Before Using This Product*

### **Introducing XM Satellite Radio**

There's a world beyond AM and FM. XM Satellite Radio. Up to 100 channels. Coast-to-coast coverage. Digital quality sound. With many commercial-free music channels. Plus the best sports, comedy, talk, news and entertainment, including USA Today, Discovery Radio, NASCAR, Sesame Workshop, CNNfn and CNN/SI. Questions? Visit [www.xmradio.com](http://www.xmradio.com). The future is waiting.

### **How to Subscribe**

Listeners can subscribe by visiting XM on the Web at [www.xmradio.com](http://www.xmradio.com) or by calling XM's Listener Care at (800) 852-9696. Customers should have their Radio ID ready; for details, refer to "Display the ID Code". Customers are able to receive a limited number of free-to-air channels without activation.

Technology. It is prohibited to copy, decompile, disassemble, reverse engineer or manipulate any technology incorporated in receivers compatible with the XM Satellite Radio system. Furthermore, the AMBE® voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The user of this or any other software contained in an XM Radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, or disassemble the object code, or in any other way convert the object code into human-readable form. The software is licensed solely for use within this product.

### **About the XM Mark**



The "XM" mark on this product indicates that it is an XM satellite radio receiver. You can receive XM satellite radio broadcasts by connecting the unit as shown in the installation manual.




## To Listen to Music

The following explains the initial operations required before you can listen to music.

**Note:**

- Loading a disc in this product. (Refer to page 11.)

### 1. Select the desired source. (e.g. Tuner)

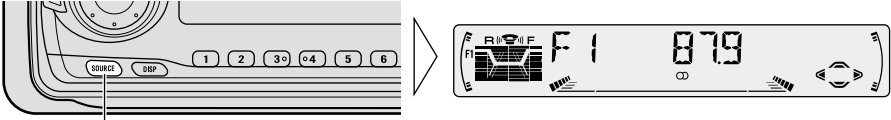


Each press changes the Source ...

Each press of the SOURCE button selects the desired source in the following order:  
Built-in CD player → TV → Tuner → Multi-CD player → XM tuner → AUX

**Note:**

 - In the following cases, the sound source will not change:
  - \* When a product corresponding to each source is not connected to this product.
  - \* When no disc is set in this product.
  - \* When no magazine is set in the Multi-CD player.
  - \* When the AUX (external input) is set to OFF. (Refer to page 45.)
- When this product's blue/white lead is connected to the car's Auto-antenna relay control terminal, the car's Auto-antenna extends when this product's source is switched ON. To retract the antenna, switch the source OFF.

### 2. Raise or lower the volume.




Rolling the VOLUME changes the volume level.

**Note:**

- Roll clockwise to raise the volume level.
- Roll counterclockwise to lower the volume level.

### 3. Turn the source OFF.

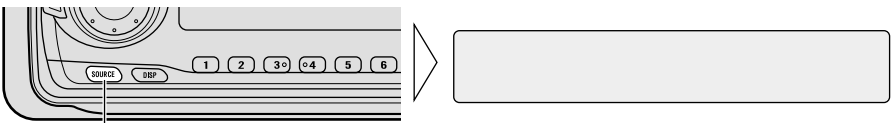

Hold for 1 second

## Basic Operation of Tuner


### Manual and Seek Tuning

- You can select the tuning method by changing the length of time you press the ◀▶ button.

Manual Tuning (step by step)	0.5 seconds or less
Seek Tuning	0.5 seconds or more

#### Note:

- If you continue pressing the button for longer than 0.5 seconds, you can skip broadcasting stations. Seek Tuning starts as soon as you release the button.
- Stereo indicator "◉" lights when a stereo station is selected.

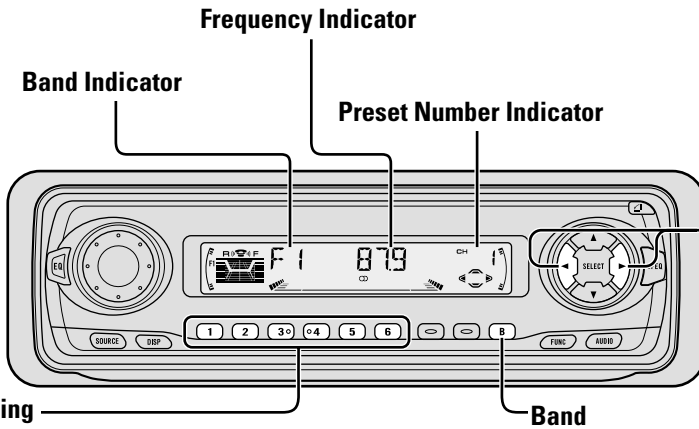

### Preset Tuning

- You can memorize broadcast stations in buttons 1 through 6 for easy, one-touch station recall.

Preset station recall	2 seconds or less
Broadcast station preset memory	2 seconds or more

#### Note:

- Up to 18 FM stations (6 in F1 (FM1), F2 (FM2) and F3 (FM3)) and 6 AM stations can be stored in memory.
- You can also use the ▲ or ▼ buttons to recall broadcast stations memorized in buttons 1 through 6.

F1 (FM1) → F2 (FM2)  
→ F3 (FM3) → AM

## Basic Operation of XM Tuner

### Selecting the Channel by Channel Number

When Channel Number Select mode is selected, you can select a desired Channel by Channel Number. (Refer to page 23.)

Initially, Channel Number Select mode is selected.

- Select a desired channel with the ◀▶ button.


#### Note:

- Channels that cannot currently be selected are skipped, and the next Channel is selected.
- If you continue pressing the button for longer than 0.5 seconds, you can increase/decrease Channel Number by 10 to enable you to quickly jump to your desired Channel.
- You can also select a Channel from a desired Channel Category. (Refer to page 23.)
- Display changes as follows when you switch Channels or operate in other ways.

Channel Number → Channel Name → Selected Display \*

\* For details, refer to “Switching the Display”.

- It may take a few seconds before you can hear anything while this product acquires and processes the satellite signal when you switch power ON, change the Source to XM tuner, or select a Channel.

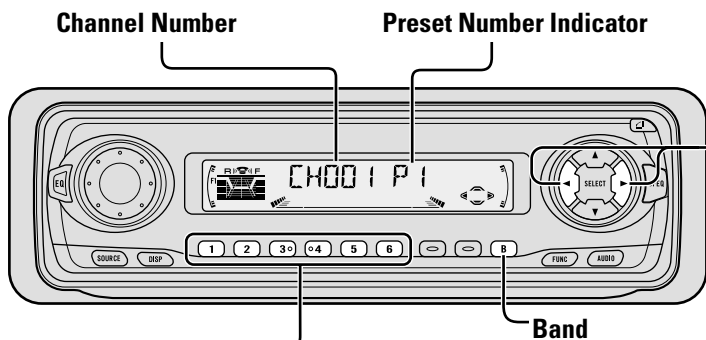

### Preset Tuning

XM1 → XM2 → XM3

- You can memorize Channels in buttons 1 through 6 for easy, one-touch Channel recall.

Preset Channel recall	2 seconds or less
Channel preset memory	2 seconds or more

#### Note:

- Memorize a Channel when you hear sound from that Channel.
- Memory/recall are for broadcasts. If you recall a memorized broadcast that has been moved to another Channel, the Channel to which the broadcast was moved is selected.
- Up to 18 XM channels (6 in XM1, XM2 and XM3) can be stored in memory.
- When Channel Number Select mode is selected, you can also use the ▲ or ▼ buttons to recall broadcast stations memorized in buttons 1 through 6.
- If a Channel you have recalled cannot be selected, a message is displayed for 2 seconds and the unit returns to the operating status before the Channel was recalled.

## Basic Operation of Built-in CD Player

### Note:

- Be sure to close the front panel after loading or ejecting a disc.

### Switching the Display

Each press of the DISPLAY button changes the display in the following order:

Playback mode (Play time)

→ Disc Title

### Note:

- If you switch displays when disc titles have not been input, "NO TITLE" is displayed.

### Open

### Note:

- Use to open the front panel when loading or ejecting a CD. (The illustration on the right shows the front panel open.)

Track Number Indicator

Play Time Indicator



### Track Search and Fast Forward/Reverse


- You can select between Track Search or Fast Forward/Reverse by pressing the ◀/▶ button for a different length of time.

Track Search	0.5 seconds or less
Fast Forward/Reverse	Continue pressing

### CD Loading Slot

**Note:**

- The Built-in CD player plays one standard 12 cm or 8 cm (single) CD at a time. Do not use an adapter when playing 8 cm CD.
- Do not insert anything other than a CD into the CD Loading Slot.

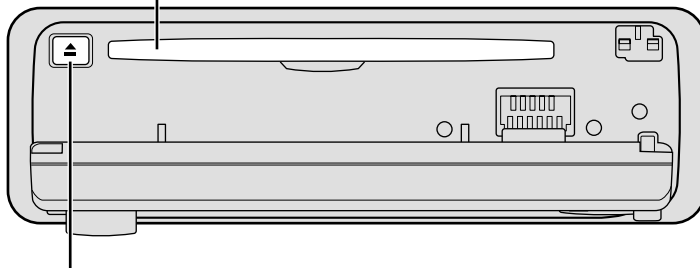

### Eject

**Note:**

- The CD function can be turned ON/OFF with the disc remaining in this product. (Refer to page 8.)
- A disc left partially inserted after ejection may incur damage or fall out.

**Note:**

- If a disc cannot be inserted fully or playback fails, make sure the label side is up. Press the EJECT button and check the disc for damage before reinserting it.
- If the Built-in CD player cannot operate properly, an error message (such as "ERROR-14") appears on the display. Refer to "Built-in CD Player's Error Message" on page 49.
- The Built-in CD player is not equipped with CD TEXT function.
- A CD TEXT disc is a CD featuring recorded text information such as Disc Title, Artist Name and Track Title.


## Basic Operation of Multi-CD Player

This product can control a Multi-CD player (sold separately).

### Track Search and Fast Forward/Reverse

- You can select between Track Search or Fast Forward/Reverse by pressing the ◀▶ button for a different length of time.

Track Search	0.5 seconds or less
Fast Forward/Reverse	Continue pressing

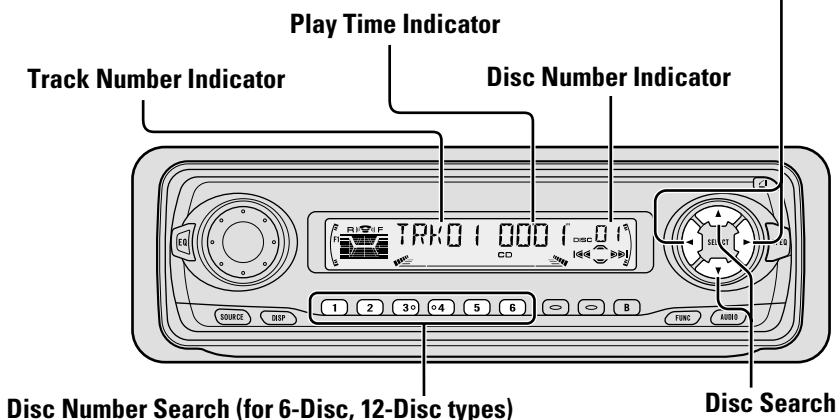

- You can select discs directly with the 1 to 6 buttons. Just press the number corresponding to the disc you want to listen to.

#### Note:

- When a 12-Disc Multi-CD Player is connected and you want to select disc 7 to 12, press the 1 to 6 buttons for 2 seconds.

#### Note:


- The Multi-CD player may perform a preparatory operation, such as verifying the presence of a disc or reading disc information, when the power is turned ON or a new disc is selected for playback. "READY" is displayed.
- If the Multi-CD player cannot operate properly, an error message such as "ERROR-14" is displayed. Refer to the Multi-CD player owner's manual.
- If there are no discs in the Multi-CD player magazine, "NO DISC" is displayed.

## Corresponding Display Indications and Buttons


This product's display features Key Guidance Indicators. These light to indicate which of the ▲/▼/◀/▶, FUNCTION and AUDIO buttons you can use. When you're in the Function Menu (refer to next section), Detailed Setting Menu (refer to page 18), Initial Setting Menu (refer to page 44) or Audio Menu (refer to page 37), they also make it easy to see which ▲/▼/◀/▶ buttons you can use to switch functions ON/OFF, switch repeat selections and perform other operations.

Indicator and corresponding buttons are shown below.


### ■ Head Unit

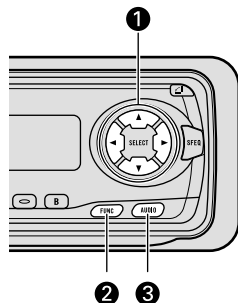

### ■ Remote Controller

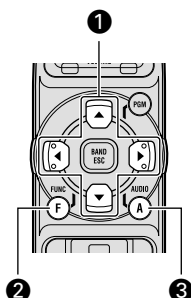

### ■ Display

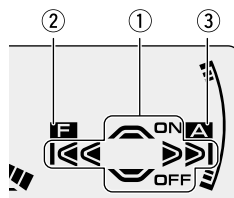

When ① is lit in the display, perform appropriate operations with the ① buttons.

When ② is lit in the display, it indicates that you are in the Function Menu, Detailed Setting Menu or Initial Setting Menu. You can switch between each of these menus and between different modes in the menus using button ② on the head unit or remote controller.

When ③ is lit in the display, it indicates you are in the Audio Menu. You can switch between modes in the Audio Menu using button ③ on the head unit or remote controller.


## Entering the Function Menu

The Function Menu lets you operate simple functions for each source.

### Note:


- After entering the Function Menu, if you do not perform an operation within about 30 seconds, the Function Menu is automatically canceled.

### 1. Select the desired mode in the Function Menu. (Refer to next section, “Function Menu Functions”.)

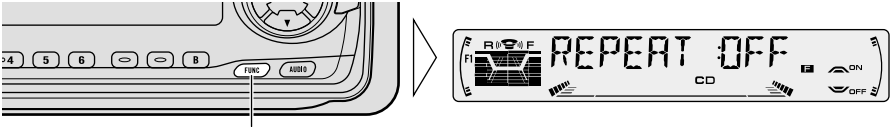


Each press changes the Mode ...

### 2. Operate a mode. (e.g. Repeat Play)

 

The button used and the operation it performs are indicated by the key guidance indicator. Press the ▲ button to switch the key guidance indicator ON, and the ▼ button to switch it OFF.

### 3. Cancel the Function Menu.

 



## Function Menu Functions

The following chart shows functions for each source in the Function Menu. The chart also shows indications for each function, operations and buttons used to perform operations. For more details, or when you want to know about an operation, refer to the page number indicated in the chart.

### ■ Tuner

Function name (Display)	Button: Operation	Page
Best Stations Memory (BSM)	▲: ON ▼: OFF	21
Local Seek Tuning (LOCAL)	1 ▲: ON ▼: OFF 2 ◀ or ▶: Select (Sensitivity)	21

### ■ XM Tuner

Function name (Display)	Button: Operation	Page
Switching the Display (DISPLAY)	▲ or ▼: Select (Display)	22
Switching the Channel Select mode (CH MODE)	▲ or ▼: Select (Channel Select mode)	23

## ■ Built-in CD Player

Function name (Display)	Button: Operation	Page
Repeat Play (REPEAT)	▲: ON ▼: OFF	25
Random Play (RANDOM)	▲: ON ▼: OFF	25
Scan Play (T-SCAN)	▲: ON ▼: OFF	26
Pause (PAUSE)	▲: ON ▼: OFF	26


## ■ Multi-CD Player

Function name (Display)	Button: Operation	Page
Repeat Play (REPEAT)	◀ or ▶: Select (Play range)	27
Selecting Discs by Disc Title List (TITLE LIST)	1 ◀ or ▶: Select (Disc Title) 2 ▲: Play	32
Random Play (RANDOM)	▲: ON ▼: OFF	27
Scan Play (SCAN)	▲: ON ▼: OFF	28
ITS Play (ITS-P)	▲: ON ▼: OFF	29
Pause (PAUSE)	▲: ON ▼: OFF	28
Compression and DBE (COMP)	▲ or ▼: Select (Sound Quality Function)	33

## Entering the Detailed Setting Menu


In the Detailed Setting Menu, you can operate convenient, complex functions for each source.

### 1. Enter the Detailed Setting Menu.

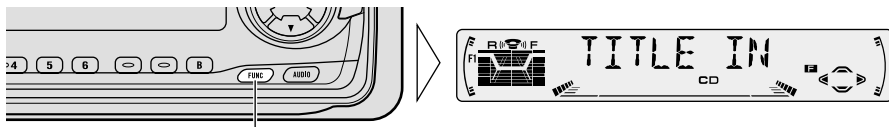

Hold for 2 seconds


### 2. Select the desired mode. (Refer to next section, “Detailed Setting Menu Functions”.)

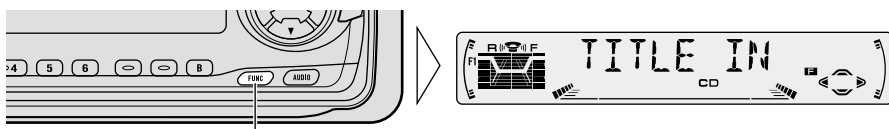

Each press changes the Mode ...

### 3. Operate a mode.
 
### 4. Cancel the Detailed Setting Menu.



#### Note:

- You can cancel the Detailed Setting Menu by pressing the FUNCTION button again for 2 seconds.

## Detailed Setting Menu Functions

The following chart shows functions for each source in the Detailed Setting Menu. The chart also shows indications for each function, operations and buttons used to perform operations. For more details, or when you want to know about an operation, refer to the page number indicated in the chart.

### Note:

- Tuner and XM tuner have no Detailed Setting Menu.

### ■ Built-in CD Player

Function name (Display)	Button: Operation	Page
Disc Title Input (TITLE IN)	1 ▲ or ▼: Select (Letter) 2 ◀ or ▶: Select (Position) 3 ►: Memory	26

### ■ Multi-CD Player

Function name (Display)	Button: Operation	Page
Disc Title Input (TITLE IN)	1 ▲ or ▼: Select (Letter) 2 ◀ or ▶: Select (Position) 3 ►: Memory	31
ITS Programming (ITS)	▲: Memory	29

## PGM Button Functions

The following chart shows functions for each source by pressing PGM button. For more details, or when you want to know about an operation, refer to the page number indicated in the chart.

### ■ PGM

Source	Function name	Page
Tuner	Best Stations Memory (OFF)	21
	Best Stations Memory (ON)	
	(Hold for 2 seconds)	21
XM tuner	Switching the Display	22
Built-in CD player	Pause	26
Multi-CD player	Pause	28
TV	Best Station Sequential Memory (OFF)	—
	Best Station Sequential Memory (ON)	
	(Hold for 2 seconds)	—

### Note:

- For the details of TV functions, refer to the TV's manual.

# Tuner Operation

## Local Seek Tuning (LOCAL)

When Local is ON, you can only select broadcast stations providing strong reception.

1. Press the **FUNCTION** button and select the Local mode (LOCAL) in the Function Menu.
2. Switch the Local ON/OFF with the **▲/▼** buttons.



3. Select the desired Local Seek sensitivity with the **◀/▶** buttons.



FM : LOCAL 1 ↔ LOCAL 2 ↔ LOCAL 3 ↔ LOCAL 4

AM : LOCAL 1 ↔ LOCAL 2

### Note:

- The LOCAL 4 setting allows reception of only the strongest stations, while lower settings let you receive progressively weaker stations.

## Best Stations Memory (BSM)

The BSM function stores stations in memory automatically.

 
1. Press the **FUNCTION** button and select the BSM mode (BSM) in the Function Menu.
2. Switch the BSM ON with the **▲** button.

The stations with the strongest signals will be stored under buttons 1–6 and in order of their signal strength.



### Note:

- You can also switch the BSM function ON by pressing the PGM button for 2 seconds.
- To cancel the process, press the **▼** button in the Function Menu before memorization is complete.



### Note:

- You can also switch the BSM function OFF by pressing the PGM button.

## **Switching the Display**

XM Channels each have a channel number and channel name. XM programming also carries song or program title, artist name, and other information such as lyrics, when available. When the source is XM, display indications are up to eight letters long.

- 1. Press the FUNCTION button and select the Display mode (DISPLAY) in the Function Menu.**
- 2. Select the desired display with the ▲/▼ buttons.**

The display changes as follows:

Channel Number → Channel Name → Artist Name/Feature → Song/Program Title  
→ Additional Information

Initially, Channel Name is selected.

### **Note:**

- If the Additional Information in the Function Menu is longer than the length of the display, you can scroll the text by pressing the ▲/▼ buttons for 2 seconds. Scrolling automatically stops after being repeated 3 times.

## Switching the Channel Select Mode

You can switch if you select a Channel with a Channel Number or from a Channel Category when you select a channel.

Initially, Channel Number Select mode is selected.

1. Press the **FUNCTION** button and select the Channel Select mode (CH MODE) in the Function Menu.
2. Select the desired Channel Select mode with the ▲/▼ buttons.



Channel Number Select mode (CHNUMBER) ↔ Channel Category Select mode (CATEGORY)

## Selecting the Channel in the Channel Category

Channels are organized into various program categories, e.g. Rock, Classic, Jazz. You can search between different categories, and then search among channels within each channel category.

 
1. Select the Channel Category Select mode. (Refer to “Switching the Channel Select Mode” above.)
2. Press the **BAND** button and cancel the **FUNCTION** Menu.
3. Select the desired Channel Category with the ▲/▼ buttons.



### Note:

- Once you select a Channel Category, the unit searches for Channels in that category. During search, the channel category doesn't immediately change even if you press the button. To successively change the Channel Category, continue pressing the button.

4. Select the desired Channel in the selected Channel Category with the ◀/▶ buttons.



### Note:

- Channels that cannot currently be selected are skipped, and the next Channel in that Channel Category is selected.



## Display the ID Code (RADIO ID)

Each XM tuner is identified with a unique Radio ID. You will need the Radio ID when activating XM service or when reporting a problem. How to display the ID Code depends on the Channel Select mode.

### ■ Channel Number Select mode

If you select “CH 00”, the ID Code is displayed.

- **Select the Channel Number zero (CH 00) with the ◀/▶ buttons.**

### ■ Channel Category Select mode

“RADIO ID” is provided as a Channel Category for displaying the ID Code.

- **Select the Channel Category “RADIO ID” with the ▲/▼ buttons.**

#### Note:

- If you select another Channel, display of the ID Code is canceled.
- Display of the ID Code repeats displaying “RADIO ID” and the ID Code one after the other.

## Messages


When problems occur with XM tuner, a message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action.

Message	Possible cause	Recommended action
ANTENNA	The XM antenna is not connected.	Check whether the XM antenna cable is attached securely.
	A short-circuit occurring in the antenna or the surrounding antenna cable.	Make sure that there is nothing unusual with the antenna or antenna cable.
UPDATING	Radio is being updated with latest encryption code.	Wait until encryption code is being updated. Channels 00 and 01 should function normally.
NOSIGNAL	XM signal is too weak at the current location.	Wait until the car reaches a location with a stronger signal.
LOADING	Unit is acquiring audio or program information.	Wait until the unit has received the information.
OFF AIR	The channel currently selected has stopped broadcasting.	Select another channel.
-----	The user has selected a Channel Number that does not exist or is not subscribed to.	Automatically switches to Channel 01.
----	There is no artist name/feature, song/program title, or additional information associated with the channel at that time.	No action needed.

## Repeat Play (REPEAT)

Repeat Play plays the same track repeatedly.

1. Press the **FUNCTION** button and select the **Repeat mode (REPEAT)** in the **Function Menu**.
2. Switch the **Repeat Play ON/OFF** with the **▲/▼** buttons.

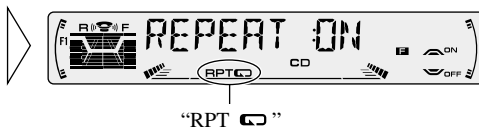

### **Note:**

- If you perform Track Search or Fast Forward/Reverse, Repeat Play is automatically canceled.

## Random Play (RANDOM)

Random Play plays the tracks on a CD in random order for variety.

1. Press the **FUNCTION** button and select the **Random mode (RANDOM)** in the **Function Menu**.
2. Switch the **Random Play ON/OFF** with the **▲/▼** buttons.



## Scan Play (T-SCAN)

Scan Play plays the first 10 seconds or so of each track on a CD in succession.

1. Press the **FUNCTION** button and select the **Scan mode (T-SCAN)** in the **Function Menu**.
2. Switch the **Scan Play ON** with the **▲** button.



3. When you find the desired track, cancel the **Scan Play** with the **▼** button.

If the Function Menu has been canceled automatically, select the Scan mode in the Function Menu again.



 
### **Note:**

- Scan Play is canceled automatically after all the tracks on a disc have been scanned.

## Pause (PAUSE)

Pause temporarily stops the currently playing track.

1. Press the **FUNCTION** button and select the **Pause mode (PAUSE)** in the **Function Menu**.
2. Switch the **Pause ON/OFF** with the **▲/▼** buttons.



### **Note:**

- You can also switch the Pause function ON/OFF by pressing the PGM button.

## Disc Title Input (TITLE IN)

You can use "TITLE IN" to input up to 48 disc titles for CDs in the Built-in CD player. (Perform the same operation as (described) on page 31 under "Using Multi-CD Players".)


### **Note:**

- After the title for 48 discs have been entered, data for a new disc will overwrite the oldest one.
- If you connect a Multi-CD player, you can input disc titles for up to 100 discs.

## Repeat Play (REPEAT)

There are three repeat play ranges: One-track Repeat, Disc Repeat and Multi-CD player Repeat. Default repeat play range is Multi-CD player Repeat.

1. Press the **FUNCTION** button and select the Repeat mode (REPEAT) in the **Function Menu**.
2. Select the desired repeat play range with the **◀/▶** buttons.  
Multi-CD player Repeat → One-track Repeat → Disc Repeat

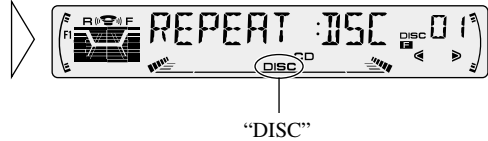

Play range	Display	Indicator
Multi-CD player Repeat	MCD	—
One-track Repeat	TRK	RPT
Disc Repeat	DSC	DISC


### Note:

 - If you select other discs during the repeat play, the repeat play range changes to Multi-CD player Repeat.
- If you perform Track Search or Fast Forward/Reverse during One-track Repeat, the repeat play range changes to Disc Repeat.

## Random Play (RANDOM)

Tracks are played at random within the selected repeat play range as explained in “Repeat Play” above.

1. Press the **FUNCTION** button and select the Random mode (RANDOM) in the **Function Menu**.
2. Switch the Random Play **ON/OFF** with the **▲/▼** buttons.



After selecting the desired repeat play range from those referred to in “Repeat Play” above, switch Multi-CD Player Random Play ON.

Display	Play range
DRDM	Disc Repeat
RDM	Multi-CD player Repeat

### Note:

- One-track Repeat changes to the Disc Repeat when you switch the Random Play ON.

## Scan Play (SCAN)

In the Disc Repeat, the beginning of each track on the selected disc is scanned for about 10 seconds. In the Multi-CD player Repeat, the beginning of the first track on each disc is scanned for about 10 seconds.

### 1. Press the FUNCTION button and select the Scan mode (SCAN) in the Function Menu.

### 2. Switch the Scan Play ON with the ▲ button.

After selecting the desired repeat play range from those referred to in “Repeat Play” on page 27, switch Multi-CD Player Scan Play ON.



### 3. When you find the desired track (or disc), cancel the Scan Play with the ▼ button.

If the Function Menu has been canceled automatically, select the Scan mode in the Function Menu again.



Display	Play range
DSCN	Disc Repeat
SCAN	Multi-CD player Repeat

#### Note:

 
- Scan Play is canceled automatically after all the tracks or discs have been scanned.
- One-track Repeat changes to the Disc Repeat when you switch the Scan Play ON.

## Pause (PAUSE)

Pause temporarily stops the currently playing track.

### 1. Press the FUNCTION button and select the Pause mode (PAUSE) in the Function Menu.

### 2. Switch the Pause ON/OFF with the ▲/▼ buttons.



#### Note:

- You can also switch the Pause function ON/OFF by pressing the PGM button.

## ITS (Instant Track Selection)

The ITS function allows you to search for the track you wish to play when a Multi-CD player is installed. You can use ITS to program automatic playback of up to 24 tracks per disc from up to 100 discs. (You can store ITS program and Disc Title data for up to 100 discs in memory.)

### ITS Programming (ITS)

Programmed tracks are played within the selected repeat play range in the “Repeat Play” on page 27.

1. Play the track you wish to program.
2. Select the ITS Programming mode (ITS) in the Detailed Setting Menu. (Refer to page 18.)
3. Program the desired track with the ▲ button.



#### Note:

 
- After 100 discs have been programmed, data for a new disc will overwrite the data for the disc that has not been played back for the longest time.

### ITS Play (ITS-P)

ITS Play of tracks is performed within the play range explained in the “Repeat Play” section.

1. Press the FUNCTION button and select the ITS Play mode (ITS-P) in the Function Menu.
2. Switch the ITS Play ON/OFF with the ▲/▼ buttons.

After selecting the desired repeat play range from those referred to in “Repeat Play” on page 27, switch ITS Play ON.




#### Note:

- If no track in the current range is programmed for ITS Play, “ITS EMPTY” is displayed.

## Erase a Track Program

1. Select the track you wish to erase, during ITS Play.
2. Select the ITS Programming mode (ITS) in the Detailed Setting Menu. (Refer to page 18.)
3. Erase the track program with the ▼ button.

 ITS is canceled and playback of the next ITS-programmed track begins. If there are no more programmed tracks in the current range, "ITS EMPTY" is displayed and normal play resumes.



## Erase a Disc Program

1. Select the disc you wish to erase, while the disc is playing.
2. Select the ITS Programming mode (ITS) in the Detailed Setting Menu. (Refer to page 18.)
3. Erase the disc program with the ▼ button.



## Disc Title

### Disc Title Input (TITLE IN)

You can input Titles up to 10 letters long for up to 100 discs. Using this function lets you easily search for and select a desired disc for play. (You can store ITS program and Disc Title data for up to 100 discs in memory.)

1. **Play the disc you wish to input the disc title.**
2. **Select the Disc Title Input mode (TITLE IN) in the Detailed Setting Menu. (Refer to page 18.)**

#### Note:

- When playing a CD TEXT disc on a CD TEXT compatible Multi-CD player, you cannot switch to this mode.
- A CD TEXT disc is a CD featuring recorded text information such as Disc Title, Artist Name and Track Title.

3. **Select letters, numbers and symbols with the ▲/▼ buttons.**

To insert a space, select the flashing cursor “\_”.



4. **Move the box left and right with the ◀/▶ buttons.**



5. **When you have completed title input, make the 10th letter flash, then memorize by pressing the ► button.**



#### Note:

- Titles remain in memory, even after the disc has been removed from the magazine, and are recalled when the disc is reinserted.
- After the titles for 100 discs have been entered, data for a new disc will overwrite the data for the disc that has not been played back for the longest time.
- You can display the disc title of the disc currently playing. For details, refer to “Displaying Disc Title” on page 32.



## Selecting Discs by Disc Title List (TITLE LIST)

Follow the procedures below to play a disc for which you have input the title in a Multi-CD player or a CD TEXT disc on a CD TEXT compatible Multi-CD player.

### 1. Press the **FUNCTION** button and select the Disc Title List mode (**TITLE LIST**) in the Function Menu.

### 2. Select the desired disc title with the **◀/▶** buttons.

Nothing is displayed for disc whose titles have not been input.



### 3. Play the selected disc with the **▲** button.



## Displaying Disc Title

You can display the currently playing Disc Title.

### Note:

- You can also display the currently playing Disc Title when playing a CD TEXT disc on a CD TEXT compatible Multi-CD player. (Refer to page 34.)
- Switch the Disc Title Display with the DISPLAY button.**

Each press of the DISPLAY button changes the display in the following order:

Playback mode (Play Time)  
→ Disc Title



### Note:

- If you switch displays when disc titles have not been input, "NO TITLE" is displayed.

## Compression and DBE (COMP)

Using the COMP (Compression) and DBE (Dynamic Bass Emphasis) functions enables Multi-CD player sound quality adjustment. Each of the functions enables two-step adjustment.

### ■ COMP

The COMP (Compression) function adjusts imbalances between loud and subdued sounds at higher volumes.

### ■ DBE

DBE (Dynamic Bass Emphasis) boosts bass levels to give a fuller sound.

## COMP/DBE ON/OFF Switching

1. Press the **FUNCTION** button and select the **COMP/DBE** switching mode (**COMP**) in the Function Menu.
2. Select the desired mode with the **▲/▼** buttons.

COMP OFF → COMP 1 → COMP 2  
→ COMP OFF → DBE 1 → DBE 2



### Note:

- You can use these functions with a Multi-CD player that has them. If the player does not feature the COMP/DBE functions, "NO COMP" is displayed if you try to use them.

## CD TEXT Function (for CD TEXT compatible type)

You can use these functions when playing a CD TEXT disc on a CD TEXT compatible Multi-CD player.

### Title Display Switching

- **Select the desired title display with the DISPLAY button.**

Each press of the DISPLAY button changes the display in the following order:

Playback mode (Play Time)

→ Disc Title → Disc Artist Name

→ Track Title → Track Artist Name

#### Note:

- If certain text information is not recorded on a CD TEXT disc, "NO ~" (e.g. "NO T-TITLE") is displayed.



### Title Scroll

This product displays the first 10 letters only of Disc Title, Artist Name and Track Title. With text longer than 10 letters, you can see the rest of the text by scrolling.

- **Scroll the title display by pressing the DISPLAY button for 2 seconds.**



## Setting the Sound Focus Equalizer (SFEQ)

Clarifying the sound image of vocals and instruments allows the simple staging of a natural, pleasant sound environment.

Even greater listening enjoyment will be obtained if seating positions are chosen carefully.

### About the Sound Focus Equalizer (SFEQ)


“FRT1” boosts the treble on the front output and the bass on the rear output.

“FRT2” boosts the treble and the bass on the front output and the bass on the rear output.

(The bass boost is the same for both front and rear.)


For both “FRT1” and “FRT2” the “HI” setting provides a more pronounced effect than the “LOW” setting.

#### 1. Select the desired SFEQ mode.

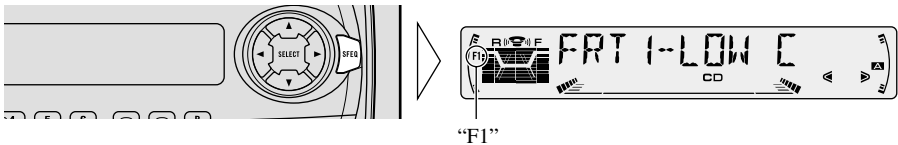

FRT1-HI (front 1-high) → FRT1-LOW (front 1-low) → FRT2-HI (front 2-high)  
→ FRT2-LOW (front 2-low) → CUSTOM (custom) → SFEQ OFF (off)

#### 2. Select the desired Position.

 

L (left) ↔ C (center) ↔ R (right)


#### Note:

- If you adjust the bass or treble, “CUSTOM” memorizes an SFEQ mode in which the bass and treble are adjusted for personal preference.

## Selecting the Equalizer Curve

You can switch between Equalizer curves.

- **Select the desired Equalizer curve.**

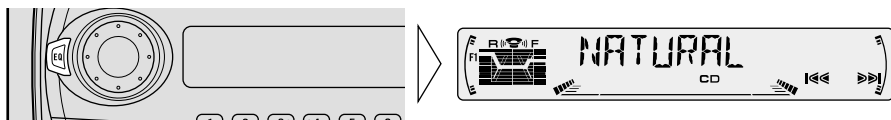

POWERFUL (powerful) → NATURAL (natural) → VOCAL (vocal)  
 → CUSTOM 1 (custom 1) → CUSTOM 2 (custom 2) → EQ FLAT (flat)  
 → SUPER BASS (super bass)

## About the Custom Curves

“CUSTOM 1” and “CUSTOM 2” are adjustable equalizer curves. (Refer to “Equalizer Curve Adjustment” on page 38 and “Equalizer Curve Fine Adjustment” on page 39.)

### ■ CUSTOM 1

A separate “CUSTOM 1” curve can be created for each source. (The Built-in CD player and Multi-CD player are set to the same Equalizer Curve Adjustment setting automatically.)

If you make adjustments when a curve other than “CUSTOM 2” is selected, the equalizer curve settings are memorized in “CUSTOM 1”.

### ■ CUSTOM 2

A “CUSTOM 2” curve can be created common to all sources.

If you make adjustments when the “CUSTOM 2” curve is selected, the “CUSTOM 2” curve is updated.


## Entering the Audio Menu

With this Menu, you can adjust the sound quality.

### Note:

- After entering the Audio Menu, if you do not perform an operation within about 30 seconds, the Audio Menu is automatically canceled.
- Audio Menu functions change depending on the Rear Output setting in the Initial Setting Menu. (Refer to “Setting the Rear Output” on page 46.)


### 1. Select the desired mode in the Audio Menu.

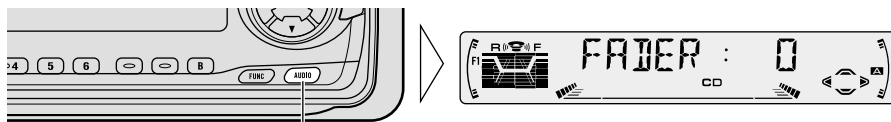

Each press changes the Mode ...

### 2. Operate a mode.
 
### 3. Cancel the Audio Menu.



## Audio Menu Functions

The Audio Menu features the following functions.

### Balance Adjustment (FADER)

This function allows you to select a Fader/Balance setting that provides ideal listening conditions in all occupied seats.

#### 1. Press the AUDIO button and select the Fader/Balance mode (FADER) in the Audio Menu.

 
#### 2. Adjust front/rear speaker balance with the ▲/▼ buttons.

“FADER :F 15” – “FADER :R 15” is displayed as it moves from front to rear.



### 3. Adjust left/right speaker balance with the ◀/▶ buttons.

“BAL :L 9” – “BAL :R 9” is displayed as it moves from left to right.



#### Note:

- When the Rear Output setting is “FRT+S/W”, you cannot adjust front/rear speaker balance. (Refer to page 46.)
- “FADER :0” is the proper setting when 2 speakers are in use.

## Equalizer Curve Adjustment (EQ-LOW/EQ-MID/EQ-HIGH)

You can adjust the currently selected equalizer curve settings as desired.

### 1. Press the AUDIO button and select the Equalizer mode (EQ-LOW/EQ-MID/EQ-HIGH) in the Audio Menu.

### 2. Select the band you want to adjust with the ◀/▶ buttons.

EQ-LOW (low) ↔ EQ-MID (mid)  
↔ EQ-HIGH (high)



### 3. Boost or attenuate the selected band with the ▲/▼ buttons.

The display shows “+6” – “-6”.




“CUSTOM”

#### Note:

- If you make adjustments when a curve other than “CUSTOM 2” is selected, “CUSTOM 1” curve is updated.


## Equalizer Curve Fine Adjustment

You can adjust the center frequency and the Q factor (curve characteristics) of each currently selected curve band (EQ-LOW/EQ-MID/EQ-HIGH).

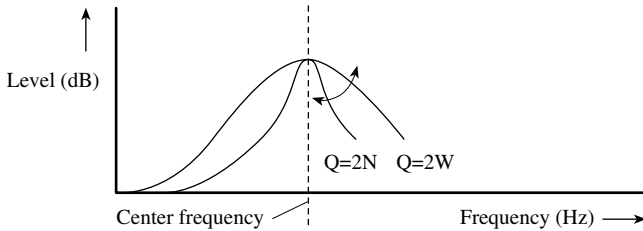

1. Press the **AUDIO** button for 2 seconds to select Equalizer Curve Fine Adjustment.

 2. Press the **AUDIO** button to select the desired band for adjustment.



3. Select the desired frequency with the **◀/▶** buttons.

LOW: 40 ↔ 80 ↔ 100 ↔ 160 (Hz)  
 MID: 200 ↔ 500 ↔ 1K ↔ 2K (Hz)  
 HIGH: 3K ↔ 8K ↔ 10K ↔ 12K (Hz)



4. Select the desired Q factor with the **▲/▼** buttons.

2N ↔ 1N ↔ 1W ↔ 2W



### Note:

- If you make adjustments when a curve other than “CUSTOM 2” is selected, “CUSTOM 1” curve is updated.



## Bass Adjustment (BASS)

 
You can adjust the cut-off frequency and the Bass level.

In “FRT1” mode, bass adjustment affects only the rear output: front output cannot be adjusted.

1. Press the **AUDIO** button and select the **Bass mode (BASS)** in the Audio Menu.


2. Select the desired frequency with the **◀/▶** buttons.

40 ↔ 63 ↔ 100 ↔ 160 (Hz)



3. Boost or attenuate the bass level with the **▲/▼** buttons.

 The display shows “+6” – “-6”.



## Treble Adjustment (TRE)

 
You can adjust the cut-off frequency and the Treble level.

In “FRT1” and “FRT2” modes, treble adjustment affects only the front output: rear output cannot be adjusted.

1. Press the **AUDIO** button and select the **Treble mode (TRE)** in the Audio Menu.


2. Select the desired frequency with the **◀/▶** buttons.

2K ↔ 4K ↔ 6K ↔ 10K (Hz)



3. Boost or attenuate the treble level with the **▲/▼** buttons.

 The display shows “+6” – “-6”.



## Loudness Adjustment (LOUD)

The Loudness function compensates for deficiencies in the low and high sound ranges at low volume. You can select a desired Loudness level.

1. Press the **AUDIO** button and select the **Loudness mode (LOUD)** in the Audio Menu.
2. Switch the Loudness function **ON/OFF** with the **▲/▼** buttons.



3. Select the desired level with the **◀/▶** buttons.

LOW (low) ↔ MID (mid) ↔  
HI (high)



## Subwoofer Output (SUB.W)

When a Subwoofer is connected, switch Subwoofer output ON.  
Initially, Subwoofer output is ON.

1. Press the **AUDIO** button and select the **Subwoofer ON/OFF mode (SUB.W)** in the Audio Menu.
2. Switch the Subwoofer output **ON/OFF** with the **▲/▼** buttons.



### Note:

 
- When the Rear Output setting is "FRT+REAR", you cannot switch the Subwoofer ON/OFF mode. (Refer to page 46.)

## Subwoofer Setting Adjustment (80HZ 0)

When the Subwoofer output is ON, you can adjust the cut-off frequency and the output level of Subwoofer.


1. Press the **AUDIO** button and select the **Subwoofer setting mode (80HZ 0)** in the Audio Menu.

2. Select the frequency to **50 Hz, 80 Hz or 125 Hz** with the **◀/▶** buttons.



3. Increase or decrease the output level with the **▲/▼** buttons.

 The display shows "+6" – "-6".



### Note:

 
- You can select the Subwoofer setting mode only when Subwoofer output is switched ON in the Subwoofer ON/OFF mode.

## Source Level Adjustment (SLA)

The SLA (Source Level Adjustment) function prevents radical leaps in volume level when switching between sources. Settings are based on the FM volume level, which remains unchanged.

1. Compare the **FM volume with the volume of the other source.** (e.g. **Built-in CD player.**)
2. Press the **AUDIO** button and select the **SLA mode (SLA)** in the Audio Menu.
3. Increase or decrease the level with the **▲/▼** buttons.

The display shows "+4" – "-4".



### Note:

- Since the FM volume is the control, SLA is not possible in the FM modes.
- The AM volume level, which is different from the FM base setting volume level, can also be adjusted similar to sources other than tuner.
- The Built-in CD player and Multi-CD player are set to the same volume adjustment setting automatically.

# Detaching and Replacing the Front Panel

 
 
## Theft Protection

The front panel of the head unit is detachable to discourage theft.

- Keep the front panel closed while driving.


## Detaching the Front Panel

### 1. Open the front panel.




### 2. Grip the left side of the front panel and pull it gently outward.

Take care not to grip it tightly or drop it.

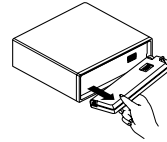


### 3. Use the protective case to store/carry the detached front panel.

 

## Replacing the Front Panel

- Replace the front panel by holding it upright to this product and clipping it securely into the mounting hooks.

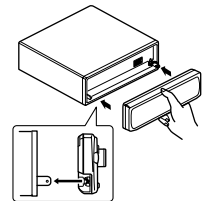

### Precaution:

- Never use force or grip the display tightly when removing or replacing the front panel.
- Avoid subjecting the front panel to excessive shocks.
- Keep the front panel out of direct sunlight and high temperatures.

## Warning Tone

If the front panel is not detached within 5 seconds after the ignition is turned off, a warning tone will sound.


### Note:

- You can cancel the warning tone function. (Refer to page 45.)

## Entering the Initial Setting Menu


With this menu, you can perform initial settings for this product.

1. Turn the source OFF.
2. Enter the Initial Setting Menu.

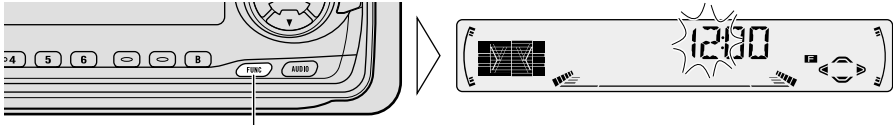


Hold for 2 seconds

3. Select a desired mode.

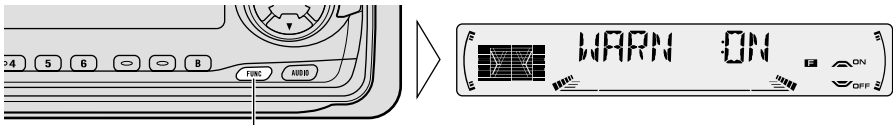

Each press changes the Mode ...

 4. Operate a mode.
5. Cancel the Initial Setting Menu.



### Note:

- Holding down the FUNCTION button for 2 seconds also cancels the Initial Setting Menu.

## Initial Setting Menu Functions

The Initial Setting Menu features the following functions.

### Setting the Time

This is the mode for setting the time on the unit's clock display. (Refer to page 47 for details concerning the clock display.)

1. Press the **FUNCTION** button and select the **Time setting mode in the Initial Setting Menu.**
2. Select **“Hour”** or **“Minute”** with the **◀/▶** buttons.



3. Set desired time with the **▲/▼** buttons.



As soon as you switch to “Minute”, the seconds start counting from 00.

### Setting the Warning Tone (WARN)

You can switch the Warning Tone function ON/OFF. (Refer to “Warning Tone” on page 43.)

1. Press the **FUNCTION** button and select the **Warning Tone mode (WARN)** in the Initial Setting Menu.
2. Switch the **Warning Tone ON/OFF** with the **▲/▼** buttons.



### Switching the AUX Mode (AUX)

It is possible to use auxiliary (AUX) equipment with this product.  
Activate the AUX mode when using external equipment with this product.

1. Press the **FUNCTION** button and select the **AUX Setting mode (AUX)** in the Initial Setting Menu.
2. Switch the **AUX Setting ON/OFF** with the **▲/▼** buttons.



## Setting the Dimmer (DIMMER)

To enable this product's display from being too bright at night, when the vehicle's head lights are turned ON the display is dimmed.

You can switch this function ON/OFF.

1. Press the **FUNCTION** button and select the **Dimmer mode (DIMMER)** in the **Initial Setting Menu**.
2. Switch the **Dimmer ON/OFF** with the **▲/▼** buttons.



## Setting the Rear Output (FRT+REAR)

 
This product's rear output (rear speaker leads output and RCA Rear output) can be used for full-range speaker ("FRT+REAR") or Subwoofer ("FRT+S/W") connection. If you switch Rear Output setting to the "FRT+S/W", you can connect a rear speaker lead directly to a Subwoofer without using an auxiliary amp.

Initially, the unit is set for rear full-range speaker connection ("FRT+REAR").

### Note:

- Even if you change this setting, there is no output unless you switch the Subwoofer Output (refer to page 41) in the Audio Menu ON.
- Both rear speaker leads output and RCA Rear output are switched simultaneously in this setting mode.

1. Press the **FUNCTION** button and select the **Rear Output setting mode (FRT+REAR)** in the **Initial Setting Menu**.
2. Change the **Rear Output setting** with the **▲/▼** buttons.




### Note:

- When no Subwoofer is connected to the rear output, select "FRT+REAR".
- When a Subwoofer is connected to the rear output, set for Subwoofer "FRT+S/W".

## Displaying the Time

- To turn the time display ON.

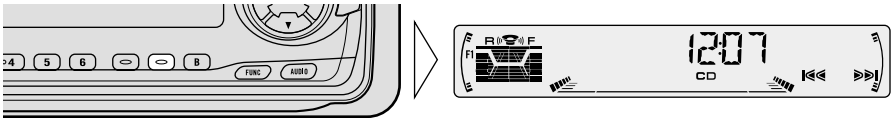

The time display disappears temporarily when you perform another operation, but the time indication returns to the display after 25 seconds.

### Note:

- Even when the sources are OFF, the Time appears on the display. Pressing the CLOCK button switches the Time display ON/OFF.


## Using the AUX Source

An IP-BUS-RCA-Interconnector such as CD-RB20 or CD-RB10 (sold separately) enables you to connect this product to auxiliary equipment featuring an RCA output.

For more details, refer to the IP-BUS-RCA Interconnector's Owner's Manual.

## Selecting the AUX Source

- Select AUX. (Refer to page 8.)

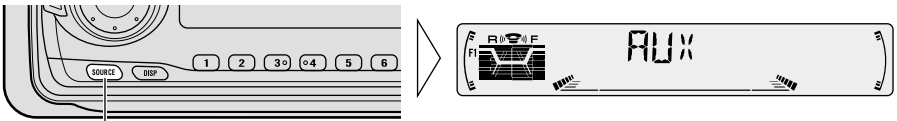


Each press changes the Source ...

## AUX Title Input (TITLE IN)

The display title for AUX source can be changed.

1. Select the AUX Title Input mode (TITLE IN) in the Detailed Setting Menu.

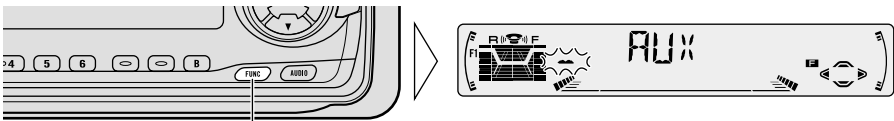

Hold for 2 seconds

2. Input the AUX Title.

Refer to "Disc Title Input" on page 31, and perform procedures 3 to 5 in the same way.




## Precaution


- Play only CDs bearing the Compact Disc Digital Audio mark.



- This product is designed for use with conventional, fully circular CDs only. Use of shaped CDs are not recommended for this product.

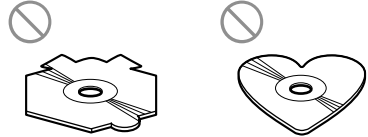

- Check all CDs before playing and discard cracked, scratched or warped discs.
- Normal playback of CD-R/CD-RW discs other than those recorded with a music CD recorder may not be possible.
- Playback of music CD-R/CD-RW discs, even those recorded with a music CD recorder, may not be possible with this product due to disc characteristics or scratches or dirt on the disc. Dirt or condensation on the lens inside this product may also prevent playback.
- This product conforms to the track skip function of the CD-R/CD-RW disc. The tracks containing the track skip information are skipped over automatically.
- If you insert a CD-RW disc into this product, time to playback will be longer than when you insert a conventional CD or CD-R disc.
- Read the precautions with the CD-R/CD-RW discs before using.
- Wipe dirty or damp discs outward from the center with a soft cloth.

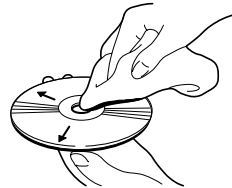

- Avoid touching the recorded (iridescent) surface when handling discs.
- Store discs in their cases when not in use.
- Keep discs out of direct sunlight and high temperatures.
- Do not affix labels or apply chemicals to discs.
- Condensation may collect inside the player when using the heater in cold weather, interfering with playback. Turn it off for an hour or so and wipe damp discs with a soft cloth.
- Road shocks may interrupt CD playback.

### **Built-in CD Player's Error Message**

When problems occur with CD playback, an error message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action. If the error persists, contact your dealer or your nearest PIONEER Service Center.

<b>Message</b>	<b>Possible cause</b>	<b>Recommended action</b>
ERROR- 11, 12, 17, 30	Dirty disc.	Clean the disc.
ERROR- 11, 12, 17, 30	Scratched disc.	Replace the disc.
ERROR- 14	Unrecorded CD.	Check the disc.
ERROR- 10, 11, 12, 14, 17, 30, A0	Electrical or mechanical problem.	Turn the ignition ON and OFF, or switch to a different source, then back to the CD player.
ERROR- 44	All tracks are setting track skip.	Replace the disc.
HEAT	CD player overheating.	Discontinue play until the machine temperature drops.

## General

Power source	..... 14.4 V DC (10.8 – 15.1 V allowable)
Grounding system	..... Negative type
Max. current consumption	
Head Unit	..... 10.0 A
Hide-away tuner	..... 2.0 A
Dimensions	
Head Unit	
(DIN) (chassis)	..... 178 (W) × 50 (H) × 157 (D) mm [7 (W) × 2 (H) × 6-1/8 (D) in]
(nose)	..... 188 (W) × 58 (H) × 19 (D) mm [7-3/8 (W) × 2-1/4 (H) × 3/4 (D) in]
(D) (chassis)	..... 178 (W) × 50 (H) × 162 (D) mm [7 (W) × 2 (H) × 6-3/8 (D) in]
(nose)	..... 170 (W) × 46 (H) × 14 (D) mm [6-3/4 (W) × 1-3/4 (H) × 1/2 (D) in]
Hide-away tuner	..... 220 (W) × 28 (H) × 145 (D) mm [8-5/8 (W) × 1-1/8 (H) × 5-3/4 (D) in]
Weight	
Head Unit	..... 1.5 kg (3.3 lbs)
Hide-away tuner	..... 0.85 kg (1.9 lbs)

## CD player

System	..... Compact disc audio system
Usable discs	..... Compact disc
Signal format	..... Sampling frequency: 44.1 kHz Number of quantization bits: 16; linear
Frequency characteristics	..... 5 – 20,000 Hz (±1 dB)
Signal-to-noise ratio	..... 94 dB (1 kHz) (IHF-A network)
Dynamic range	..... 92 dB (1 kHz)
Number of channels	..... 2 (stereo)

## FM tuner

Frequency range	..... 87.9 – 107.9 MHz
Usable sensitivity	..... 9 dBf (0.8 μV/75 Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity	..... 15 dBf (1.5 μV/75 Ω, mono)
Signal-to-noise ratio	..... 70 dB (IHF-A network)
Distortion	..... 0.3% (at 65 dBf, 1 kHz, stereo)
Frequency response	..... 30 – 15,000 Hz (±3 dB)
Stereo separation	..... 40 dB (at 65 dBf, 1 kHz)
Selectivity	..... 70 dB (2ACA)
Three-signal intermodulation (desired signal level)	..... 30 dBf
(two undesired signal level: 100 dBf)	

## AM tuner

Frequency range	..... 530 – 1,710 kHz (10 kHz)
Usable sensitivity	..... 18 μV (S/N: 20 dB)
Selectivity	..... 50 dB (±10 kHz)

## Amplifier

Continuous power output	..... 22 W per channel min. into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.
Maximum power output	..... 50 W × 4 50 W × 2 ch/4 Ω + 70 W × 1 ch/2 Ω (for Subwoofer)
Load impedance	..... 4 Ω (4 – 8 Ω [2 Ω for 1 ch] allowable)
Preout maximum output level/ output impedance	..... 2.2 V/1 kΩ
Equalizer (3-Band Parametric Equalizer)	
(Low)	..... Frequency: 40/80/100/160 Hz Q Factor: 0.35/0.59/0.95/1.15 (+6 dB when boosted) Level: ±12 dB
(Mid)	..... Frequency: 200/500/1k/2k Hz Q Factor: 0.35/0.59/0.95/1.15 (+6 dB when boosted) Level: ±12 dB
(High)	..... Frequency: 3.15k/8k/10k/12.5k Hz Q Factor: 0.35/0.59/0.95/1.15 (+6 dB when boosted) Level: ±12 dB
Loudness contour	
(Low)	..... +3.5 dB (100 Hz), +3 dB (10 kHz)
(Mid)	..... +10 dB (100 Hz), +6.5 dB (10 kHz)
(High)	..... +11 dB (100 Hz), +11 dB (10 kHz) (volume: –30 dB)
Tone controls	
(Bass)	..... Frequency: 40/63/100/160 Hz Level: ±12 dB
(Treble)	..... Frequency: 2.5k/4k/6.3k/10k Hz Level: ±12 dB
Subwoofer output	
Frequency	..... 50/80/125 Hz
Slope	..... –12 dB/oct
Gain	..... ±12 dB

## XM tuner

Frequency range	..... 2,332.50 – 2,345.00 MHz
Usable sensitivity	
Satellite	..... –94.0 dBm
Terrestrial	..... –90.0 dBm

## Audio (XM tuner)

Signal-to-noise ratio	..... 92 dB (IHF-A network)
Separation	..... 75 dB

## Note:

- Specifications and the design are subject to possible modification without notice due to improvements.



**PIONEER CORPORATION**

4-1, MEGURO 1-CHOME, MEGURO-KU, TOKYO 153-8654, JAPAN

**PIONEER ELECTRONICS (USA) INC.**

P.O. Box 1760, Long Beach, California 90801, U.S.A.

TEL: (800) 421-1404

**PIONEER EUROPE NV**

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium

TEL: (0) 3/570.05.11

**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.**

178-184 Boundary Road, Braeside, Victoria 3195, Australia

TEL: (03) 9586-6300

**PIONEER ELECTRONICS OF CANADA, INC.**

300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada

TEL: (905) 479-4411

**PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.**

San Lorenzo 1009 3er. Piso Desp. 302

Col. Del Valle Mexico, D.F. C.P. 03100

TEL: 5-688-52-90

Published by Pioneer Corporation.

Copyright © 2001 by Pioneer Corporation.

All rights reserved.

Publication de Pioneer Corporation.

Copyright © 2001 Pioneer Corporation.

Tous droits de reproduction et de traduction réservés.