



System Firmware Update Instructions for Pioneer Audio Receivers

(DMH-W4600NEX, DMH-W4660NEX, DMH-WC5700NEX, DMH-WC6600NEX, DMH-WT7600NEX, DMH-WT76NEX, DMH-WT8600NEX)

This firmware update applies only to the following models of Pioneer products sold in the United States and Canada.

DMH-W4600NEX	DMH-W4660NEX	DMH-WC5700NEX	DMH-WC6600NEX
DMH-WT7600NEX	DMH-WT76NEX	DMH-WT8600NEX	

IMPORTANT

Please download and print these firmware update instructions before downloading and installing the firmware update. It is important that you complete all steps correctly and, in the order, described below.

Note: If you have any questions, please contact Pioneer Customer Service toll free at 1-800-421-1404, Monday through Friday, 7:30 AM - 11:30 AM and 12:30 PM - 4:00 PM (Pacific Time), excluding holidays, or by email through parts.pioneerelectronics.com/contact.

In order to perform this update, the following items are needed:

- Pioneer CD receiver listed above.
- A USB storage device meeting the following requirements.
 - 2 GB or larger in capacity, formatted to FAT32
 - Blank (should not contain any files)

CAUTION: **DO NOT** turn your unit off or eject the USB storage device while the firmware is being updated. **Any interruption to the firmware update process could cause irreversible damage to the unit.**


WARNING: Install this update only when the vehicle is **safely parked in an open, well-ventilated area, such as an outdoor parking lot**, where you can safely keep the engine running to maintain power to the battery. **NEVER RUN YOUR VEHICLE'S ENGINE IN AN ENCLOSED SPACE, WHICH CAN QUICKLY FILL UP WITH TOXIC CARBON MONOXIDE GAS, LEADING TO SERIOUS INJURY OR DEATH.**

Checking the firmware version

Check whether the firmware of your unit needs to be updated by checking the version number of the firmware.


Procedure:

1. Start the vehicle engine (in an open, well-ventilated area).
2. Touch the following key.

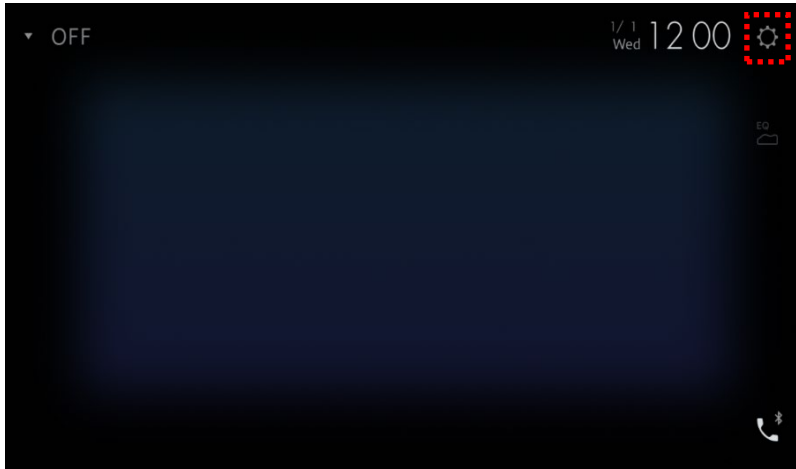


The "System" screen appears.


3. Scroll down the list and touch [System Information].

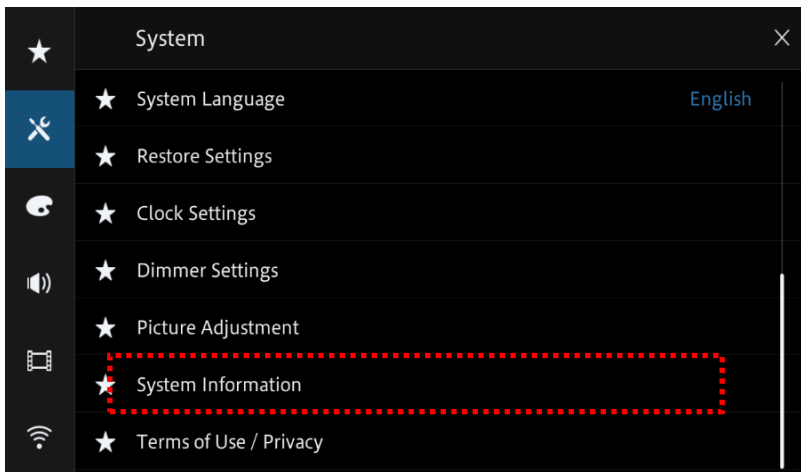

4. Touch [Firmware information].

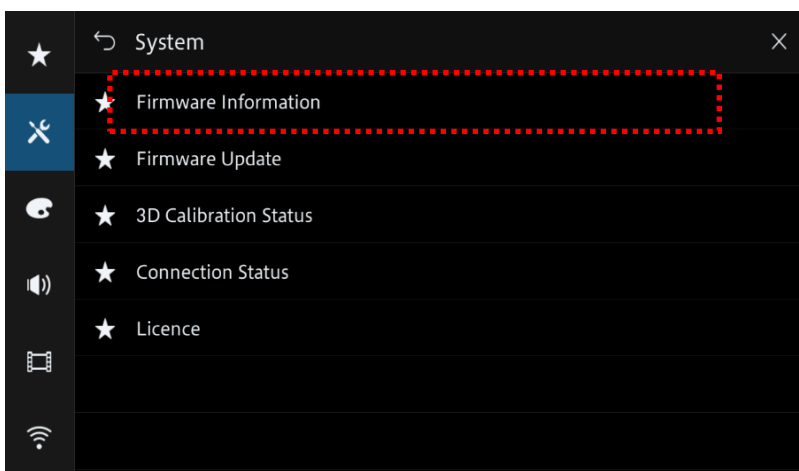

5. After the “Firmware Information” screen appears, Check the firmware version number and model name.

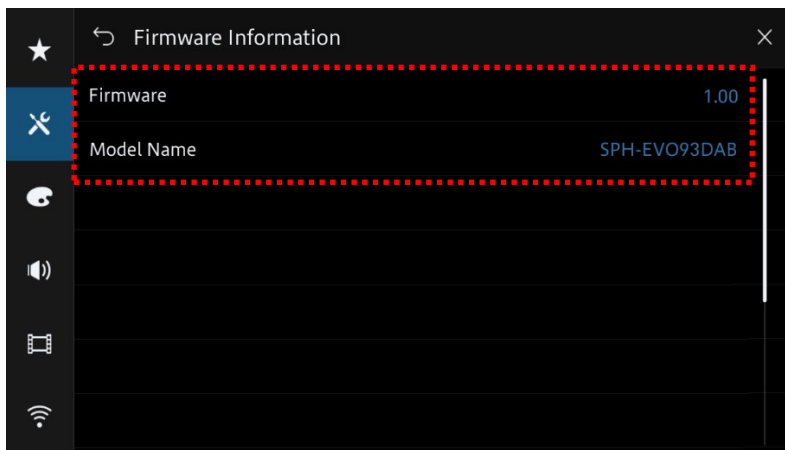

Downloading the firmware update files from Pioneer's website

1. Download the firmware update files by clicking on the following link and finding your product:
pioneerelectronics.com/firmware
2. Locate the downloaded .zip file, extract the *****.scd** file and copy it onto the USB device.
The Downloaded ZIP file will produce the following file when decompressed: (See the table below)

Model Name	Update necessary if:	File Name	Update Version
DMH-W4600NEX	Current version is 2.00 or lower	DMH-W4600NEX.avh	2.01
DMH-W4660NEX	Current version is 2.00 or lower	DMH-W4660NEX.avh	2.01
DMH-WC5700NEX	Current version is 2.00 or lower	DMH-WC5700NEX.avh	2.01
DMH-WC6600NEX	Current version is 2.00 or lower	DMH-WC6600NEX.avh	2.01
DMH-WT7600NEX	Current version is 2.00 or lower	DMH-WT7600NEX.avh	2.01
DMH-WT76NEX	Current version is 2.00 or lower	DMH-WT7600NEX.avh	2.01
DMH-WT8600NEX	Current version is 2.00 or lower	DMH-WT8600NEX.avh	2.01

Updating the firmware on your Unit

IMPORTANT

- DO NOT perform this firmware update if the model number of your Pioneer product is anything other than one of the above models.
- Ensure that the update file is located within the root (top) folder of your USB storage device. There should be no other files within the USB storage device.
- While your unit is being updated, DO NOT turn off the system's power and DO NOT touch the unit's


touchscreen as this may result in severe damage to your unit.

- DO NOT remove the USB storage device during the firmware update process.
- Performing the firmware update will restore all settings to their default values.
- Disconnect any external mobile devices connected to your unit before starting the update process.

Procedure:


Connect a blank (formatted) USB storage device to your computer, then locate and copy the correct update “**xxx.avh**” file onto the USB storage device.

1. Connect the USB storage device to the USB port.
2. Set the audio source to “OFF” on your unit.
3. Touch the following keys in the following order.

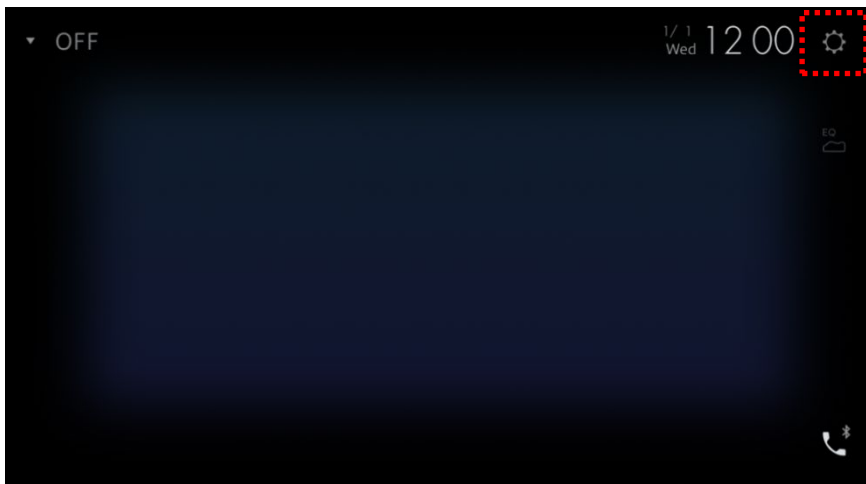


The “System” screen appears.


4. Scroll down the list and touch [System information].

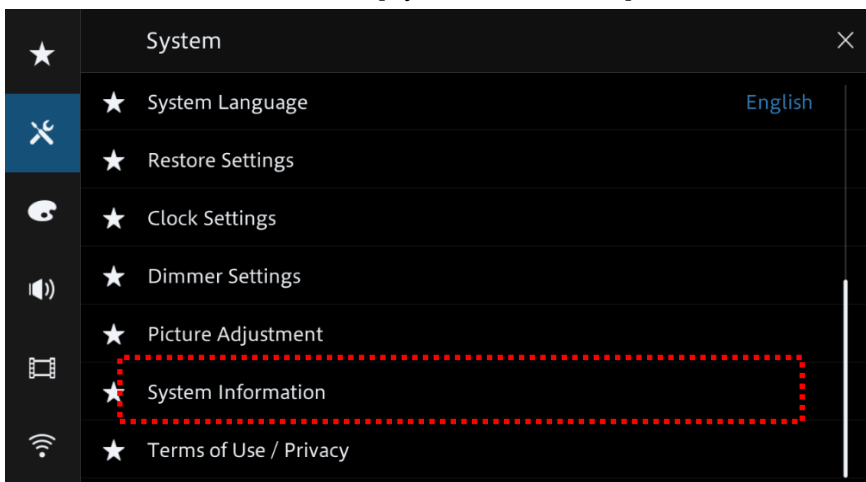


5. Touch [Firmware Update]. The "Firmware Update" screen appears.

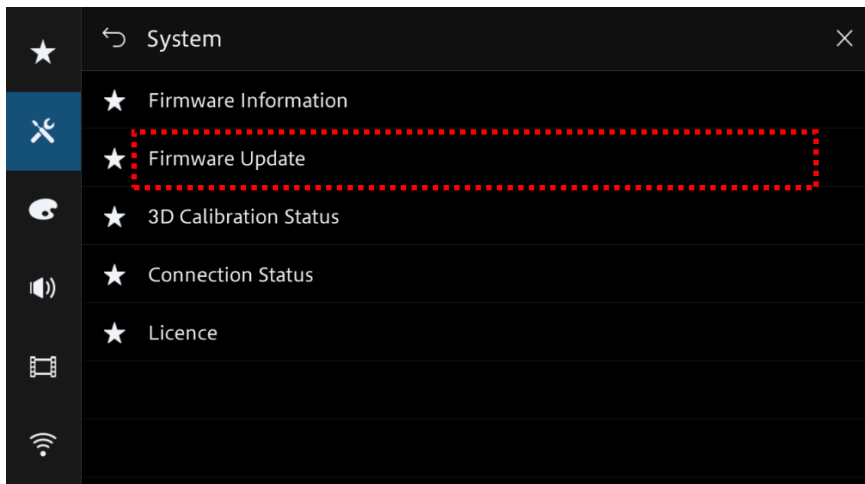


6. Touch [USB].

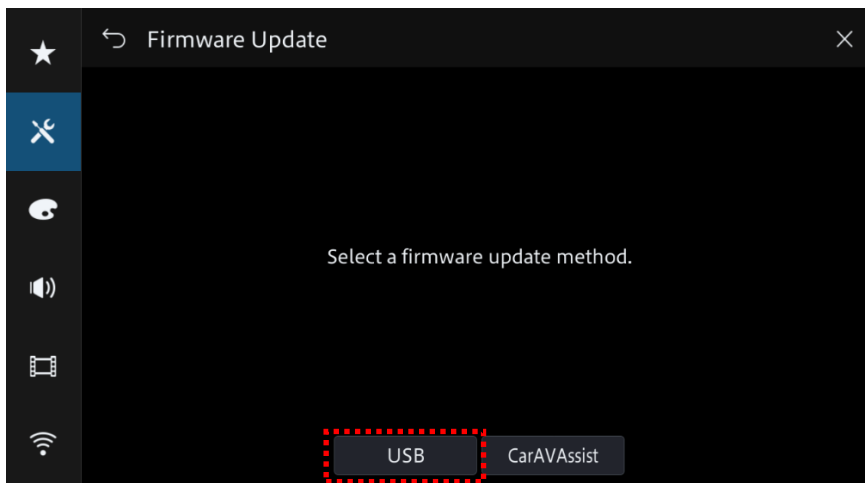


7. Touch [Continue] to display the data transfer mode.

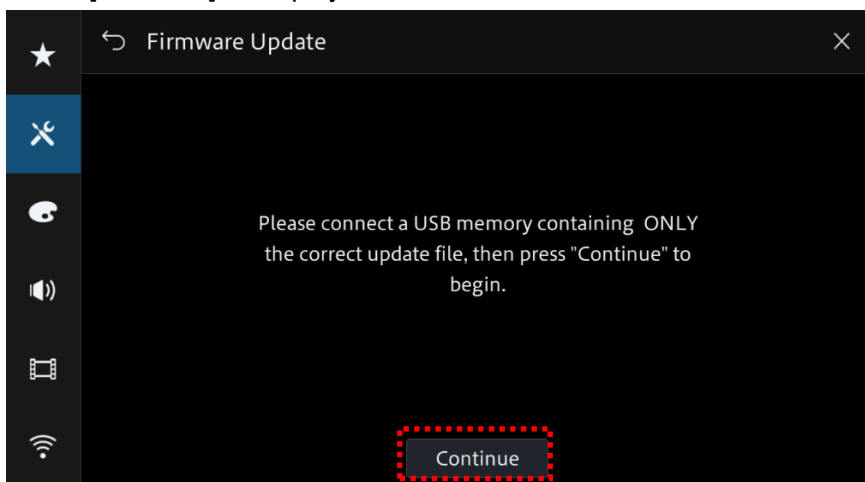

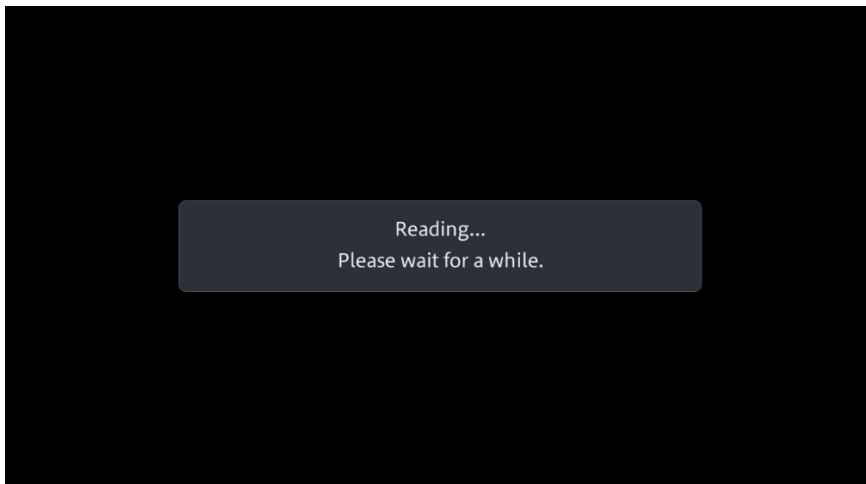


It will take a while to load, so please wait.

8. Read the “WARNING,” then touch the [Start] button to start the update process.
If it shows “ERROR” on the display, try another USB device.

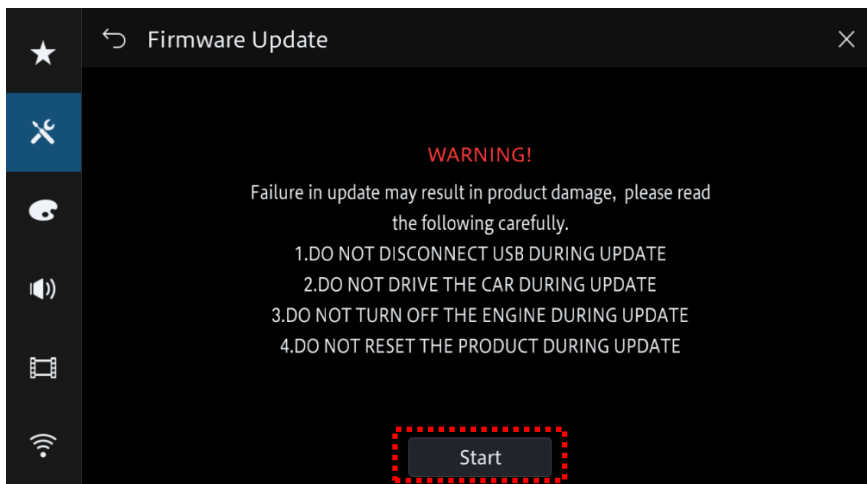

Version up will start.


9. The progress is displayed during the updating.

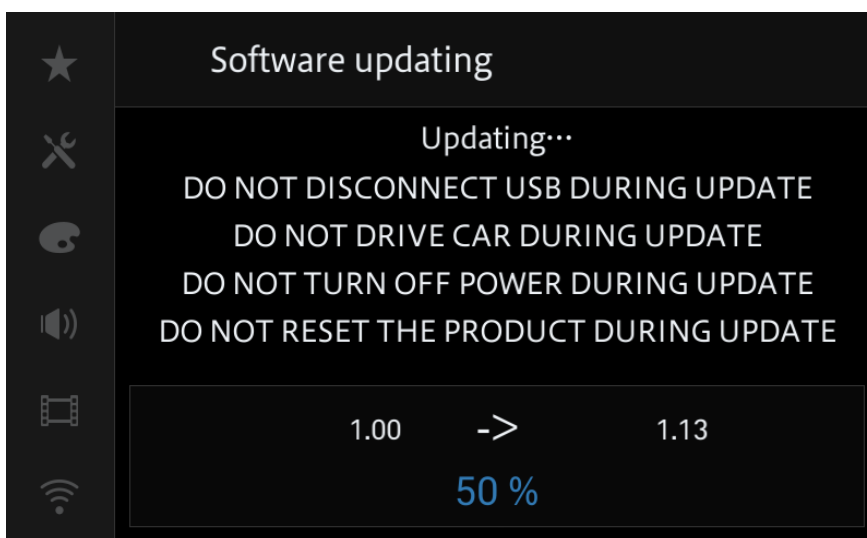


DO NOT turn your unit off or eject the USB storage device while the firmware is being updated.

10. Display will show “It succeeded...” when the update is complete.


Please disconnect the USB storage device.

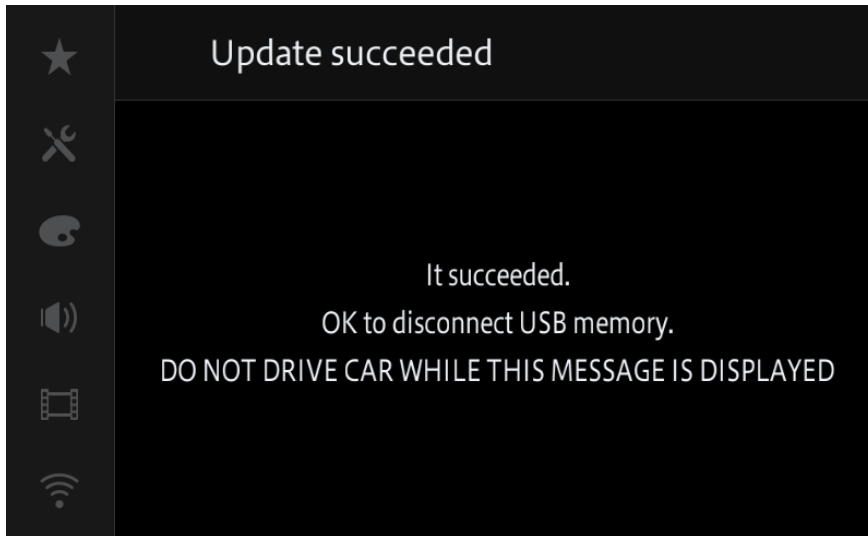

11. The product will reboot after the update is finished. Do not touch anything even when the screen is blacked out. After it has finished rebooting, the screen will return to the menu screen.

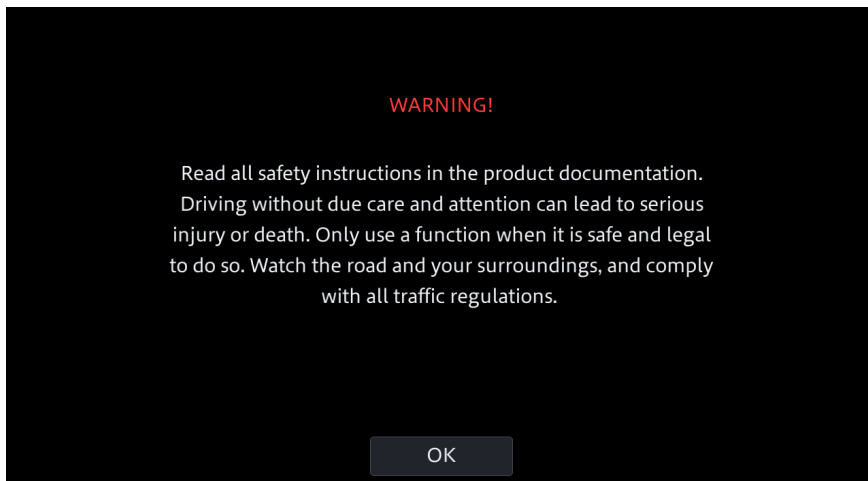

a. The firmware update is now complete. Your Pioneer AV Receiver is now ready for use.

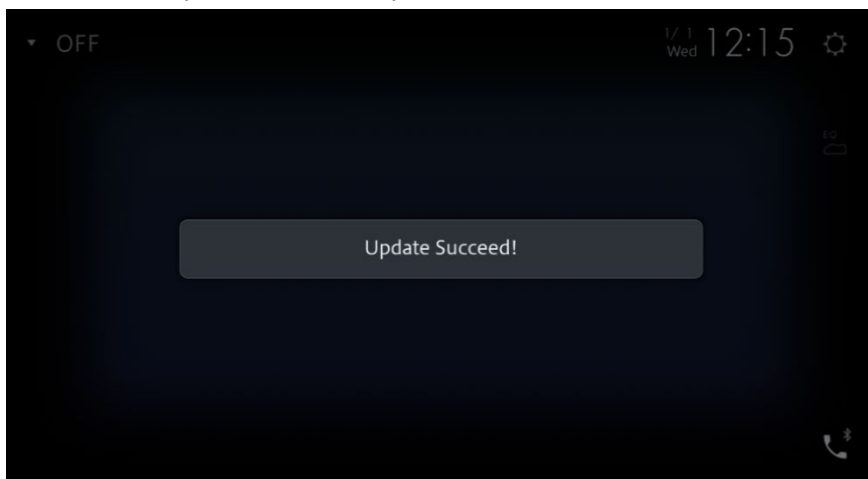

Confirm that the firmware has been updated

Perform the same procedure for “Displaying the firmware version” to confirm that the firmware has been updated.


Procedure:

1. Touch the following key.




The “System” screen appears.


2. Scroll down the list and touch [System Information].

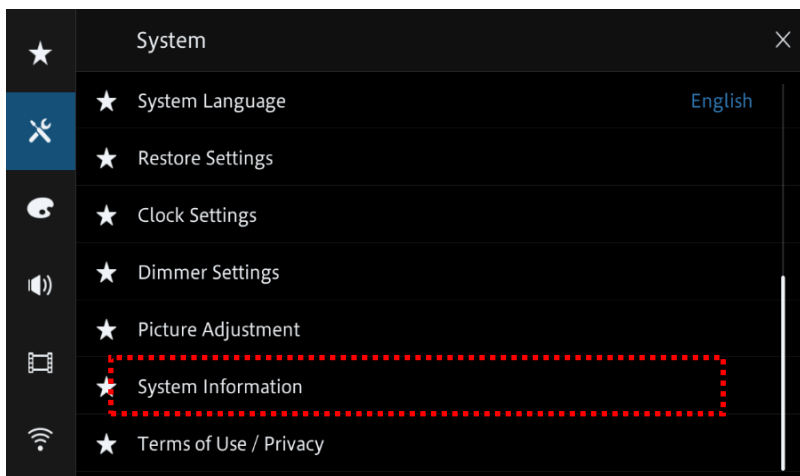

3. Touch [Firmware information].

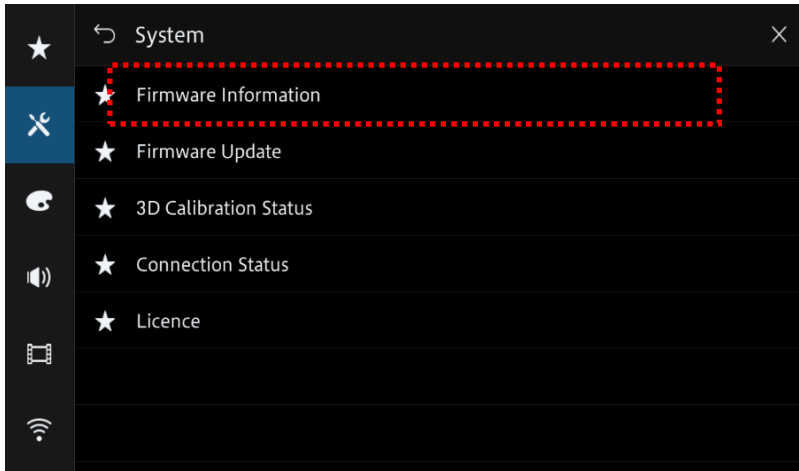

4. After the "Firmware Information" screen appears, Check the firmware version number and model name.

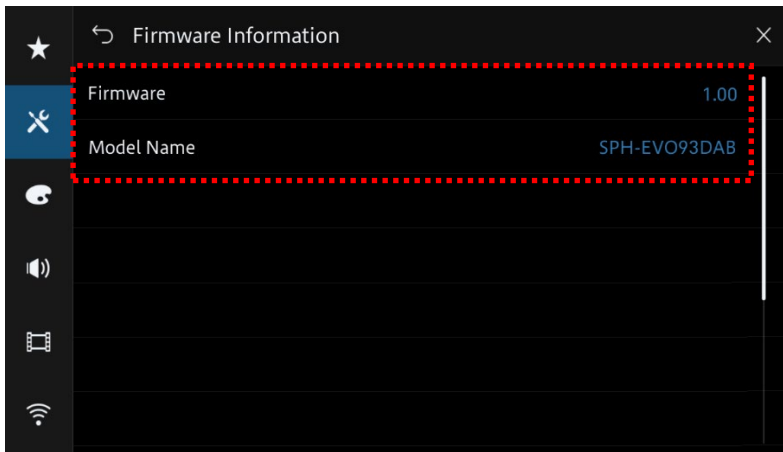

Contact Information

If you have any questions, please contact Pioneer Customer Service toll free at 1-800-421-1404, Monday through Friday, 7:30 AM - 11:30 AM and 12:30 PM - 4:00 PM (Pacific Time), excluding holidays, or online through <https://parts.pioneerelectronics.com/contact>.