

Pioneer

FLASH MEMORY MULTIMEDIA AV
NAVIGATION RECEIVER

AVIC-Z110BT

Quick Start Guide


This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the operation manual.

Basic Hardware buttons




- ① **VOICE button**
Enables you to start the voice operation.
- ② **VOL (+/-) button**
Adjusts the AV (Audio and Video) source volume.
- ③ **HOME button**
Press to display "Top Menu".
- ④ **MODE button**
Press to switch between the map screen and the AV operation screen.
- ⑤ **TRK (</>) button**
- ⑥ **OPEN CLOSE button**
Press to display the control panel of the LCD panel.

Switching the screen

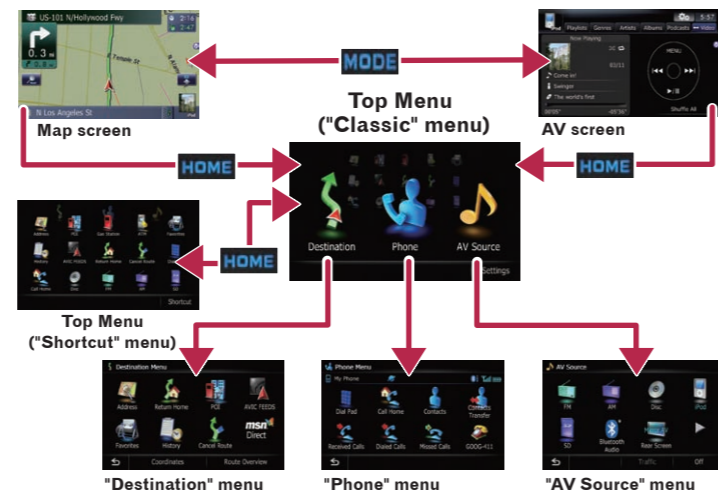

Navigation Menu



Touch **Destination** on the Top Menu.

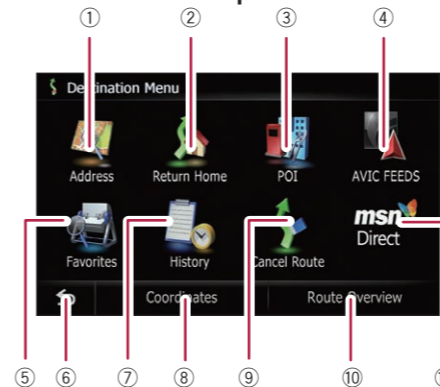



- ① Search by address
- ② Shortcut key for calculating the route home
- ③ Search for stores, restaurants, and other businesses in the points of interest database
- ④ Searching for POIs by using the data on external storage devices (SD)
- ⑤ Selecting your stored location
- ⑥ Returns the previous screen
- ⑦ Select a previously routed destination
- ⑧ Searching for a location by coordinates
- ⑨ Canceling your current route
- ⑩ Viewing the current route information
- ⑪ Browsing information on MSN® Direct

Searching for your destination by address

- 1 Display **Destination Menu** and touch **Address**.
- 4 Touch **OK**.

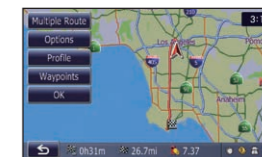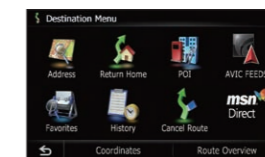

- 2 Input the information that you want to set as the destination.

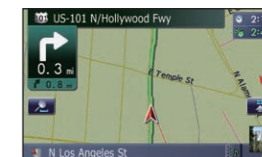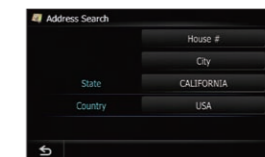

This navigation systems gives you route guidance visually and by voice.


Touching the one of options. After narrowing down your destination, "Location confirmation screen" will appear.

- 3 Touch **OK**.



After searching for the destination, the "Route confirmation screen" appears.

Basic items on the map

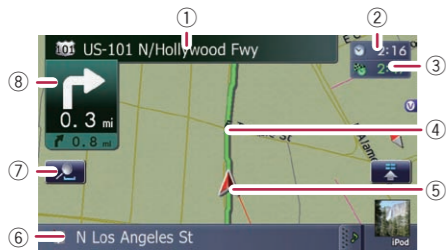

- 1 Name of the street to be used (or next guidance point)
- 2 Current time
- 3 Estimated time of arrival (or distance to the waypoint or the destination)
- 4 Current route
- 5 Current position
- 6 Street name that your vehicle is travelling along
- 7 Changing the map scale and the map orientation.
- 8 Next direction of travel


Scrolling the map

Dragging the map allows scrolling. The scroll speed will change depending on your drag speed.




Setting the volume for navigation system

Touch the keys in the following order in **Top Menu**;
Settings → **System Settings**
→ **Volume**

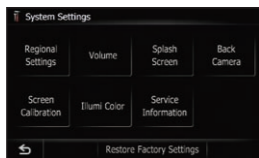

Selecting the AV source

Display **"AV Source"** menu and touch the key to select your desired AV source.


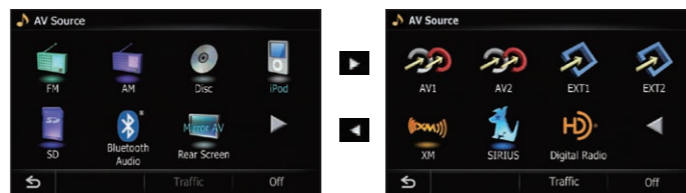


The AV source is disabled if the equipment is not connected or inserted.

Playing files from an SD memory card

You can play an audio and video file on an SD memory card. (For details about playable files, refer to "Operation Manual".)

- 1 Press the **OPEN CLOSE** button. The **"Monitor Setup"** screen appears.
- 2 Touch **SD Insert**.
- 3 Insert your SD memory card until it clicks.

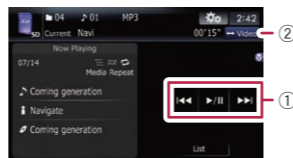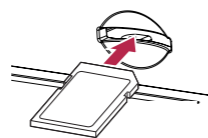


- 1 Playback control
- 2 Switch to the screen for video control.


- 4 Press the **OPEN CLOSE** button.
- 5 Touch keys to operate the **music/video source**.

Pairing your phone

- 1 Activate the **Bluetooth** function on your phone.
- 2 Touch the keys in the following order in **Top Menu**;
Settings → **Bluetooth Settings**
- 3 Turn **Bluetooth On/Off to On**.

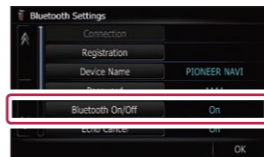

- 4 Touch **Registration on Bluetooth Settings**.

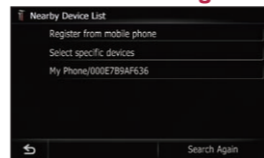


- 5 Touch your phone on the list and then enter the **PIN code from your phone. (1111 is default.)**

When the pairing is successful, the message will appear.


Transferring the phone book

- 1 Connect the cellular phone.
- 2 Touch **Contacts Transfer on Phone Menu**.
- 3 Check that the following screen is displayed, and operate your cellular phone to transfer the phone book entries.

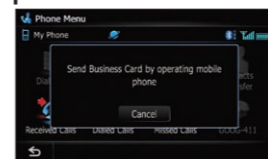

After transferring the data is finished, a message asking whether you want to transfer more data appears.

- 4 Touch **No**.

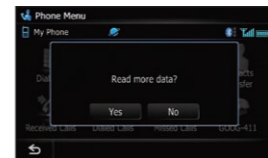


The transferred data is imported to the navigation system.

Playing your Apple iPod

You can control an iPod by connecting the USB interface cable for iPod (CD-IU50V) (sold separately) to the navigation system.

- 1 Connect your iPod.

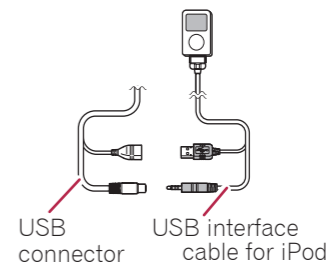

- 2 Switch the AV source to **iPod**.

Music control



- 1 Touch one of the categories in which you want to search for a song or Video.
- 2 Touch to switch between the video screen and the music screen.
- 3 Playback control

Video control

Touch **Video** to switch to the iPod-video screen.

